


IMPORTANT MANUAL

DO NOT THROW AWAY

Poulan PRO

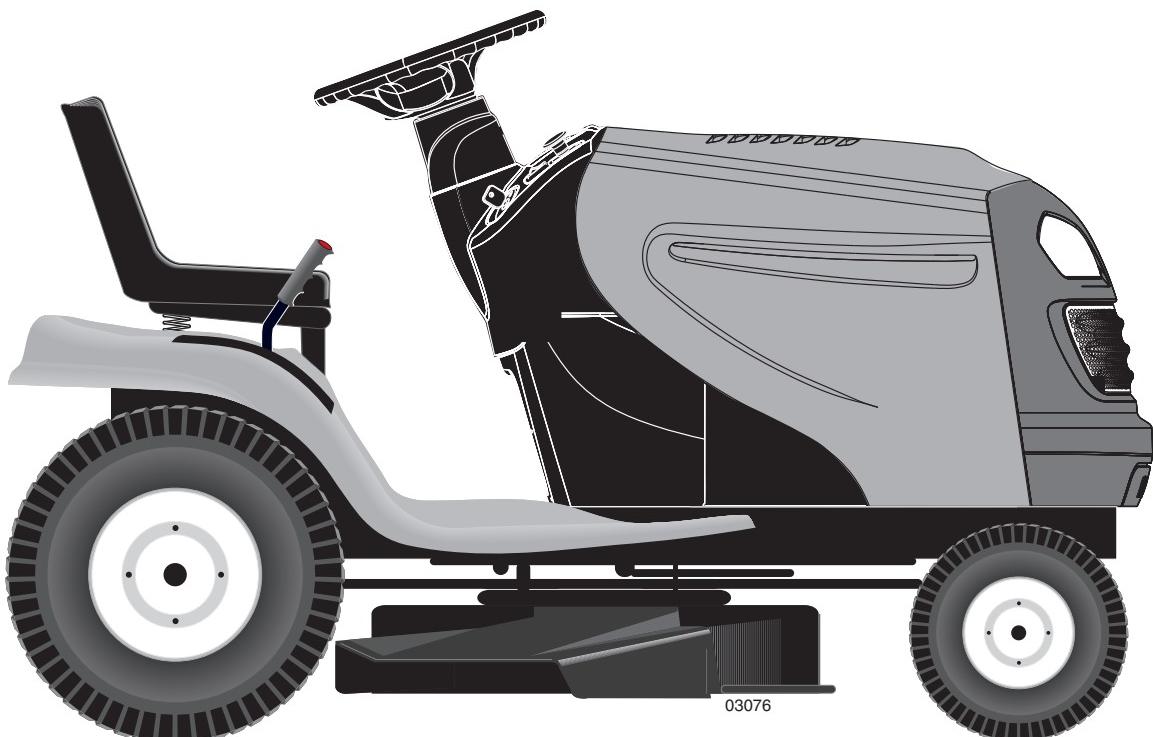

REPAIR PARTS MANUAL

MODEL:

PB195H42LT
LAWN TRACTOR

ALWAYS WEAR EYE PROTECTION DURING OPERATION

Visit our website: www.poulan-pro.com

WARNING:

Read this Manual and follow all Warnings and Safety Instructions. Failure to do so can result in serious injury.

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:

- Product - "TRACTOR"
- MODEL NUMBER - "PB195H42LT (96042003604)"
- Part Number
- Part Description



TABLE OF CONTENTS

| | |
|------------------------|-------------------|
| SCHEMATIC | 3 |
| ELECTRICAL..... | 4-5 |
| CHASSIS | 6-7 |
| DRIVE..... | 8-9 |
| ENGINE..... | 10-11 |
| STEERING | 12 |
| SEAT | 13 |
| MOWER DECK..... | 14-15 |
| MOWER LIFT..... | 16 |
| DECALS..... | 17 |
| WARRANTY..... | BACK COVER |

TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36


SCHEMATIC

SCH11

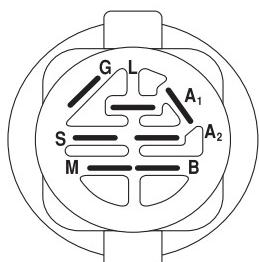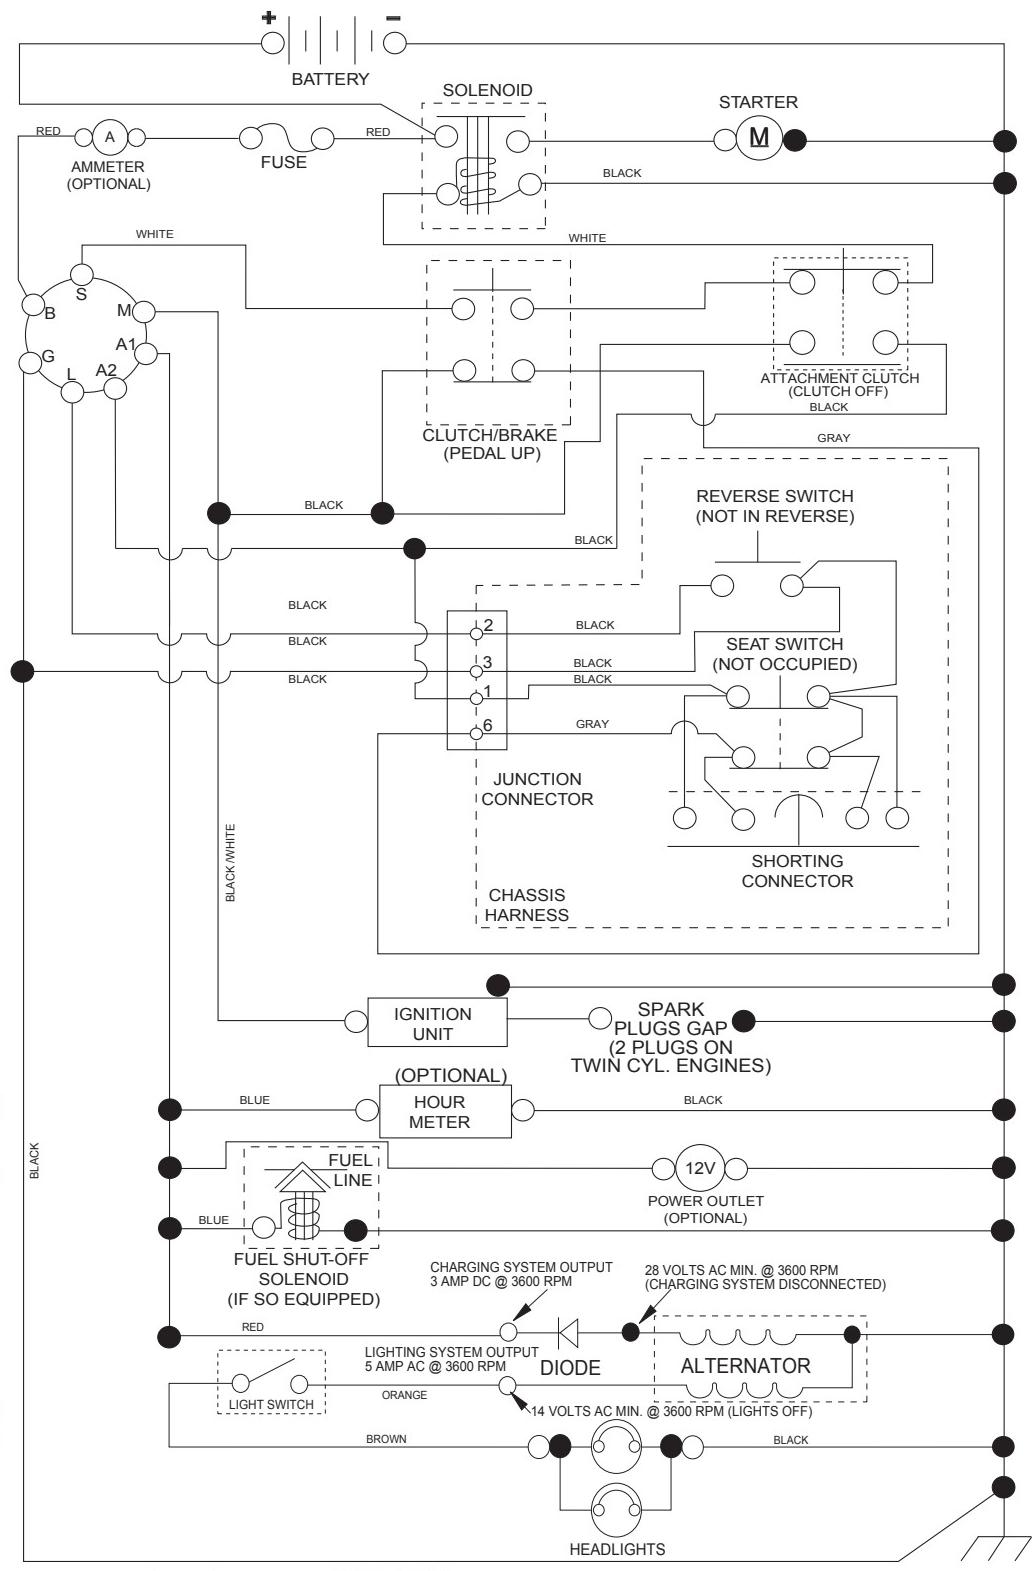


IGNITION SWITCH

| POSITION | CIRCUIT "MAKE" |
|--------------|----------------|
| OFF | M+G+A1 |
| RUN/OVERRIDE | B+A1 |
| RUN | B+A1 |
| START | B + S + A1 |

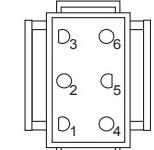

CHASSIS HARNESS CONNECTOR (MATING SIDE)

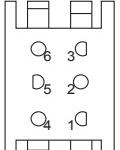


DASH HARNESS CONNECTOR (MATING SIDE)

WIRING INSULATED CLIPS
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS
REMovable CONNECTIONS

TRACTOR - - MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
ELECTRICAL

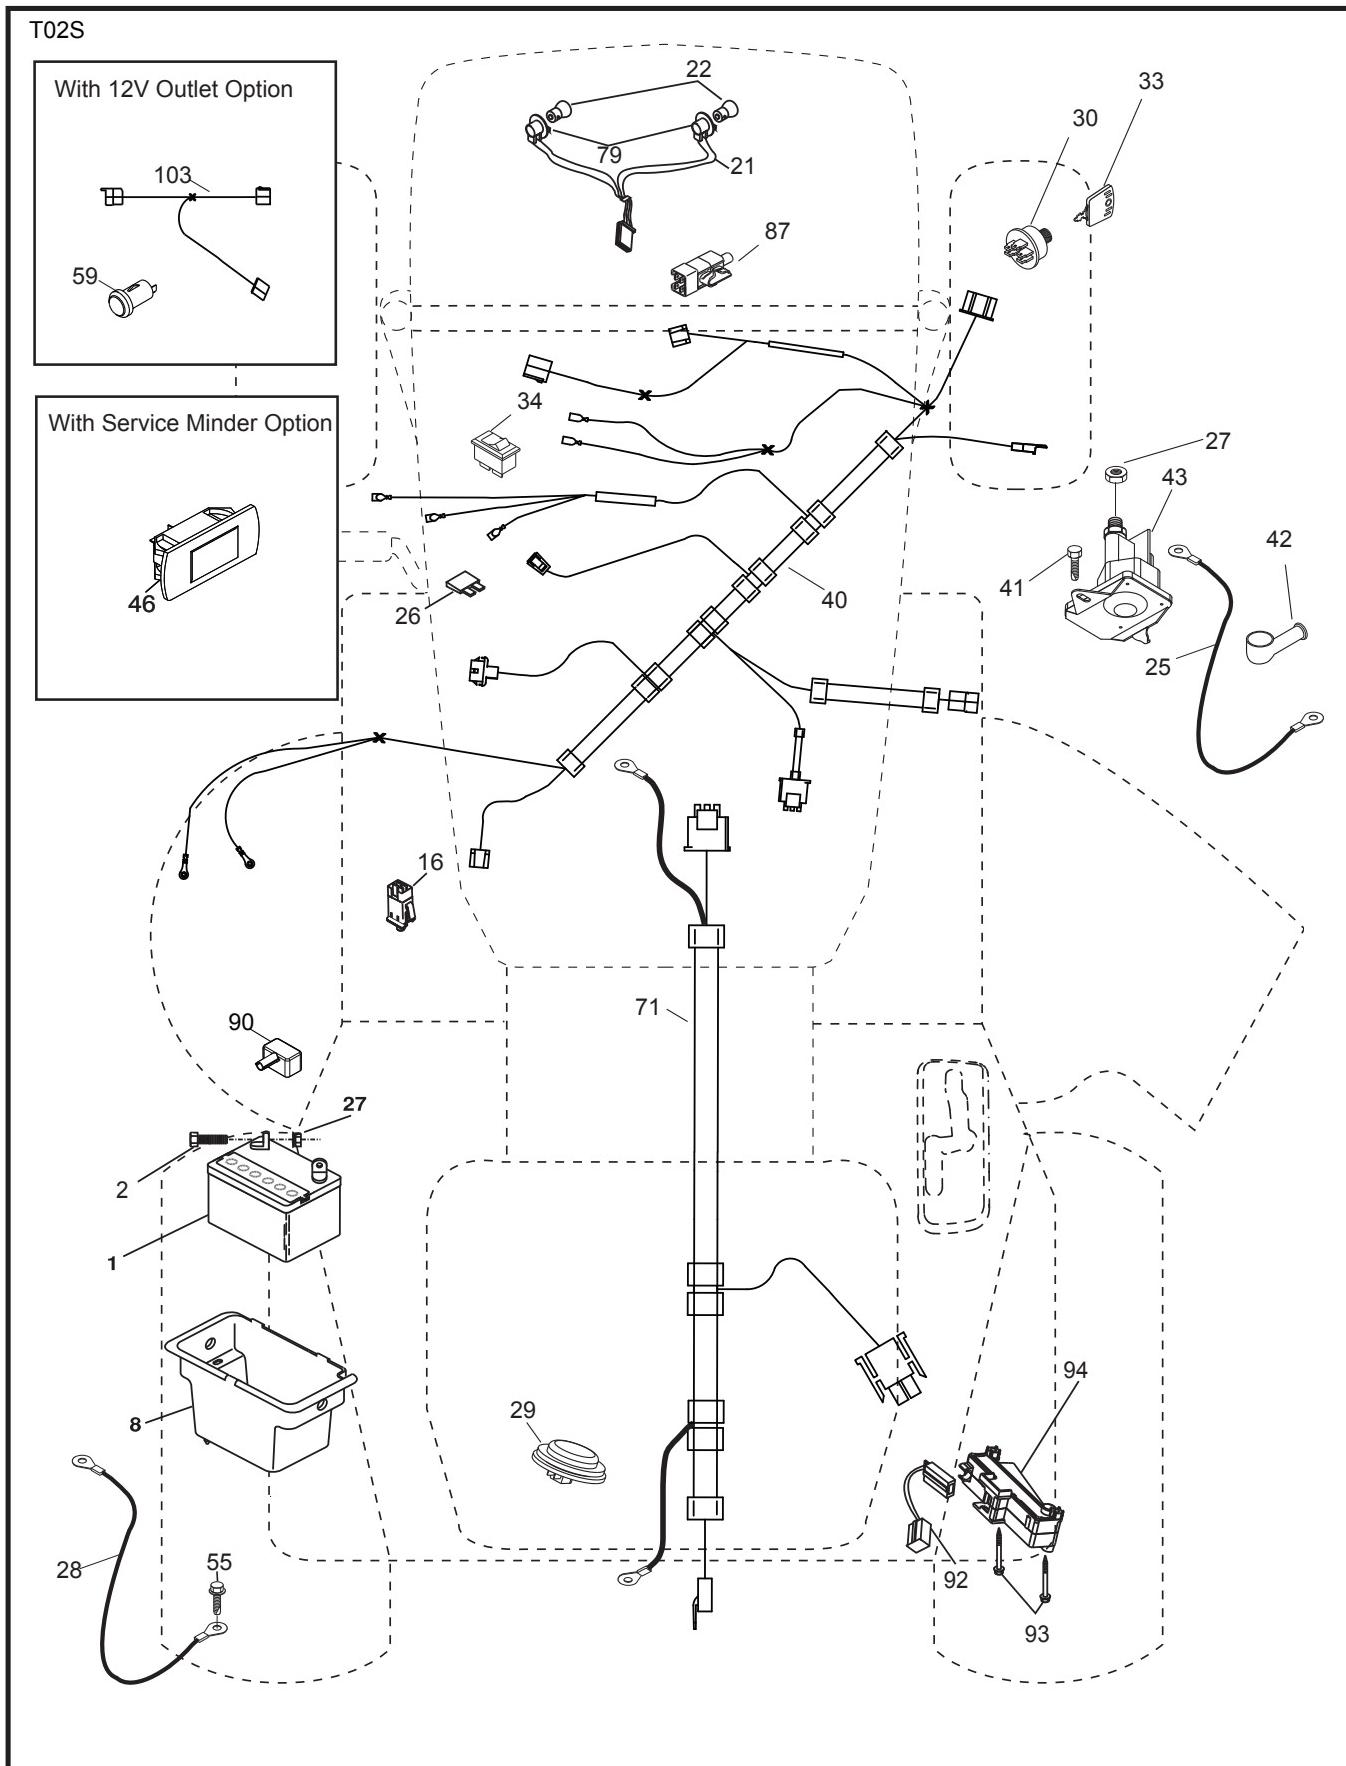


**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
ELECTRICAL**

| KEY NO. | PART NO. | DESCRIPTION |
|--------------------|---------------------|---|
| 1 | 163465 | Battery |
| 2 | 74760412 | Bolt Hex Hd 1/4-20 unc x 3/4 |
| 8 | 193228 | Box Battery |
| 16 | 176138 | Switch Interlock |
| 21 | 183759 | Harness Socket Light |
| 22 | 4152J | Bulb, Light #1156 |
| 25 | 412894 | Cable Battery |
| 26 | 175158 | Fuse |
| 27 | 73510400 | Nut Keps Hex 1/4-20 unc |
| 28 | 198885 | Cable Ground 18" Rear Battery Blk 6 Ga. |
| 29 | 401545 | Switch Seat |
| 30 | 193350 | Switch Ign |
| 33 | 411935 | Key/Chain |
| 34 | 110712X | Switch Light/Reset |
| 40 | 401098 | Harness Ign |
| 41 | 17720408 | Screw 1/4-20 unc x 1/2 |
| 42 | 131563 | Cover Terminal Red |
| 43 | 192507 | Solenoid |
| 55 | 17060512 | Screw 5/16-18 x 3/4 |
| 71 | 400449 | Harness Ign. Chass. |
| 79 | 175242 | Socket Asm. Bulb Twistlock |
| 87 | 197802 | Switch Interlock Clutch Cable |
| 90 | 400725 | Cover Terminal |
| 92 | 196615 | Harness Pigtail Console ROS |
| 93 | 192540 | Screw Plastic 10-14 x 2.0 |
| 94 | 191834 | Modual Reverse ROS |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
CHASSIS**

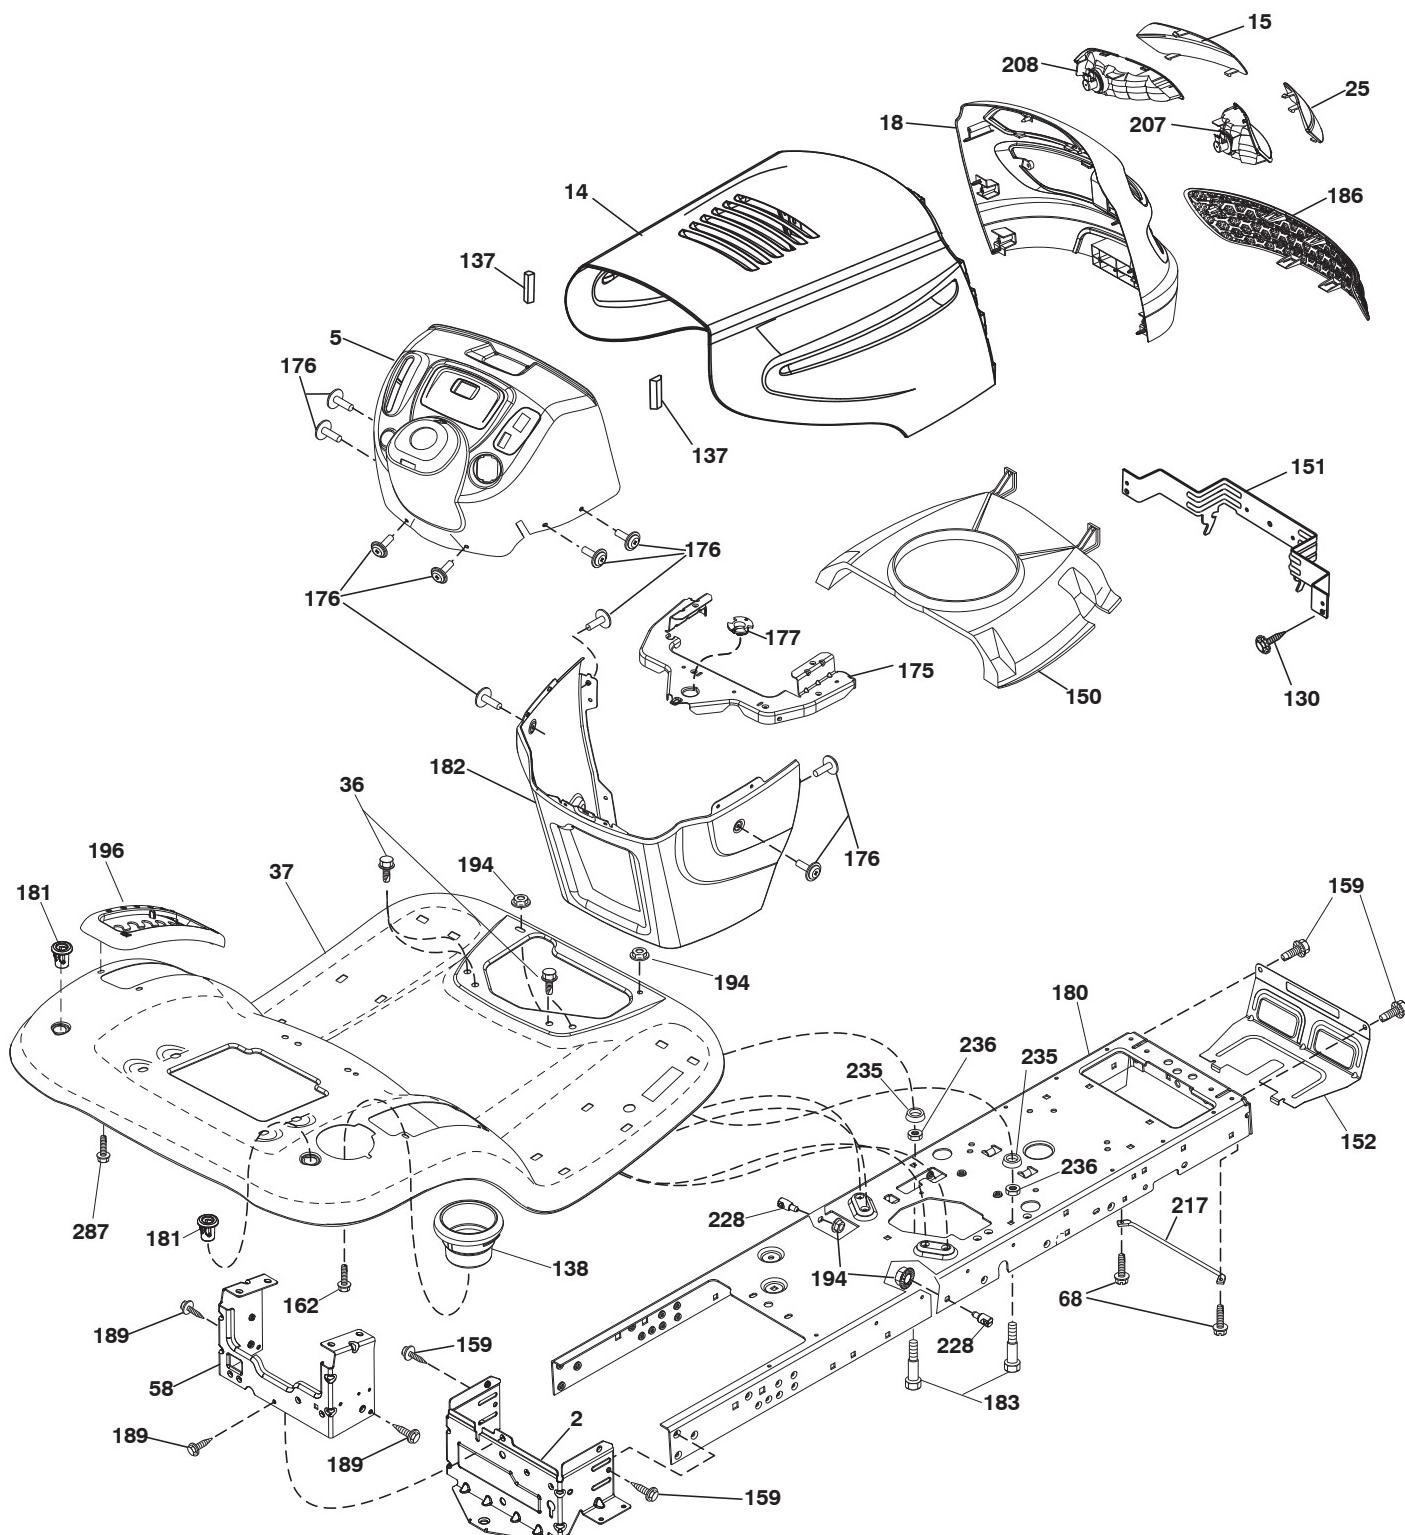


Chassis-tex_elite-sv-pro_11_r2

**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
CHASSIS**

| KEY NO. | PART NO. | DESCRIPTION |
|------------|-------------------|----------------------------------|
| 2 | 412280 | Drawbar, Upper |
| 5 | 197783X428 | Dash |
| 14 | 183393X428 | Hood |
| 15 | 183834X599 | Lens Grille LH |
| 18 | 183395X428 | Grille |
| 25 | 183835X599 | Lens Grille RH |
| 36 | 17060512 | Screw 5/16-18 x 3/4 |
| 37 | 414872X428 | Fender |
| 58 | 412282 | Drawbar, Lower |
| 68 | 17490508 | Screw Thdrol 5/16-18 x 1/2 |
| 130 | 416358 | Screw #10 x 0.750 ROS Thread |
| 137 | 184921 | Bumper Hood |
| 138 | 193224X428 | Cupholder |
| 150 | 184322 | Duct Heat Hood |
| 151 | 407807 | Bracket Pivot |
| 152 | 194329 | Shield Browning/Debris |
| 159 | 17000612 | Screw Hexwsh Thdrol 3/8-16 x 3/4 |
| 162 | 142432 | Screw Hex Wsh Hi-Lo 1/4 x 1/2 |
| 175 | 193243 | Crossmember |
| 176 | 400776 | Screw 10-24 x 5/8 Wshd Qdrx |
| 177 | 195228 | Bushing Steering |
| 180 | 194260 | Chassis |
| 181 | 193102X428 | Bushing Mtg. Fender Crgo. |
| 182 | 193057 | Dash Lower |
| 183 | 74780520 | Bolt Fin Hex 5/16-18 x 1-1/4 |
| 186 | 183829X428 | Insert Grille |
| 189 | 17000512 | Screw 5/16-18 x 3/4 |
| 194 | 73900500 | Nut Lock Hex Flange 5/16-18 |
| 196 | 414581 | Console Asm. Deck Lift |
| 207 | 183833 | Bezel Grille RH |
| 208 | 183832 | Bezel Grille LH |
| 217 | 409167 | Rod Pivot Chassis |
| 228 | 195161 | Stud Fastener |
| 235 | 406129 | Spacer Fender |
| 236 | 73930500 | Nut center Lock 5/16-18 |
| 287 | 17600406 | Screw Hex Washead 1/4-20 x 3/8 |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
DRIVE**

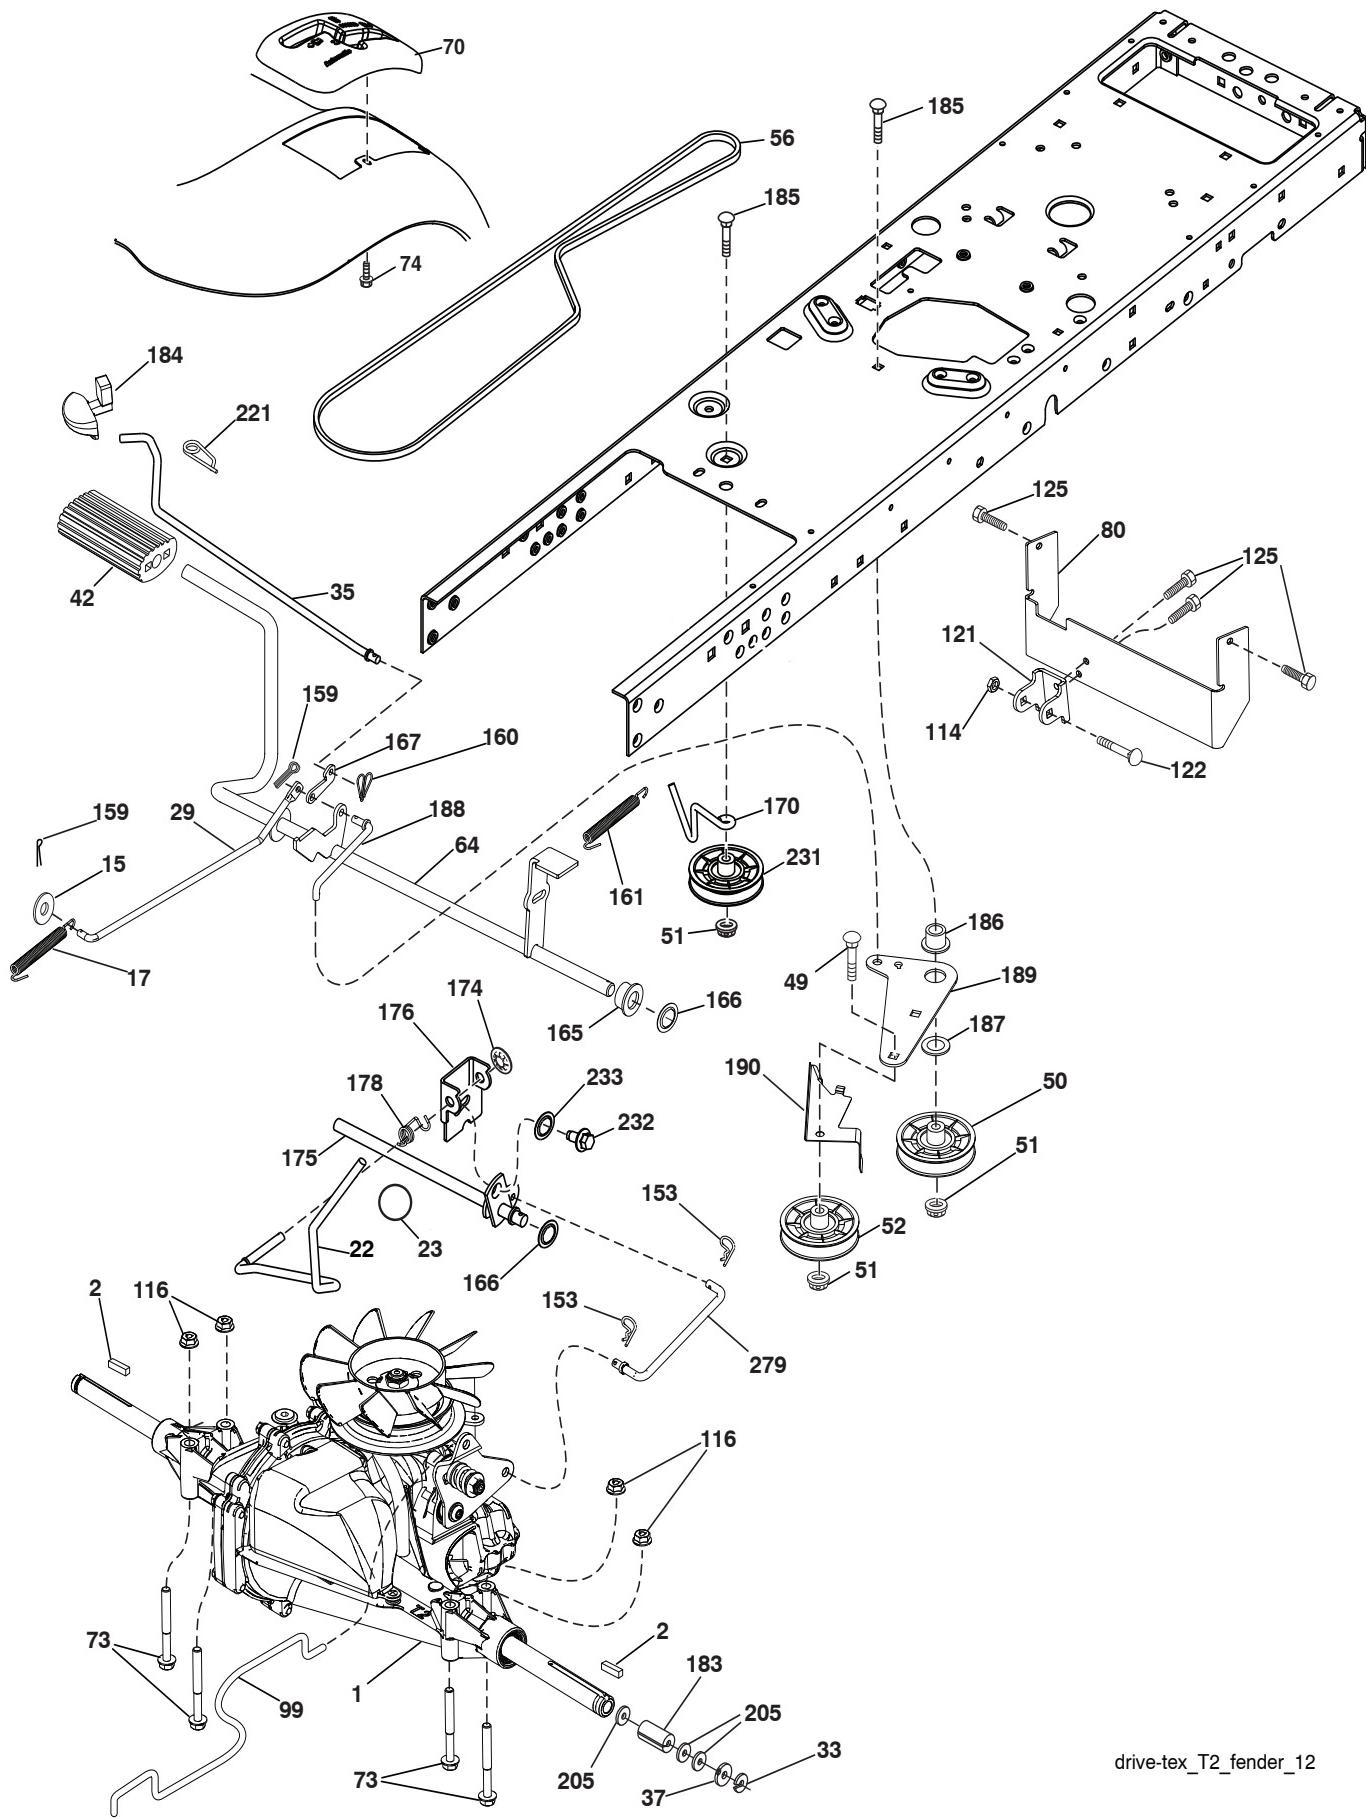


drive-tex_T2_fender_12

**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
DRIVE**

| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|------------|---------------|---|------------|-------------|--------------------------------|
| 1 | ----- | Transaxle, Hydro Gear T2-AABC-1X1A-1GX1 (Internal Parts Not Available) | 159 | 76020412 | Pin Cotter 1/8 x 3/4 |
| 2 | 123583X | Key Square | 160 | 169484 | Retainer Clip |
| 15 | 19131316 | Washer 13/32 x 13/16 x 16 Ga. | 161 | 105709X | Spring, Return, Clutch Bushing |
| 17 | 197296 | Spring, Brake | 165 | 196212 | Nut Push .625 |
| 22 | 197660 | Rod Shift | 166 | 197290 | Latch Brake Parking Keeper |
| 23 | 409154X421 | Knob | 167 | 405257 | Belt Centerspan |
| 29 | 423239 | Rod, Brake | 170 | 413430 | Nut Push |
| 33 | 12000001 | Ring E | 174 | 197289 | Shaft Asm Shift |
| 35 | 197722 | Rod, Brake, Park | 175 | 408539 | Arm Clevis Rod Shift |
| 37 | 121749X | Washer 25/32 x 1-1/4 x 16 Ga. | 176 | 196214 | Spring Shift |
| 42 | 8883R | Cover, Foot Pedal | 178 | 197456 | Spacer Axle |
| 49 | 72110614 | Bolt | 183 | 156972 | Handle Parking Brake |
| 50 | 194327 | Pulley Idler Flat | 184 | 198403X505 | Bolt |
| 51 | 73900600 | Lock Nut 3/8-16 | 186 | 194321 | Spacer Retainer |
| 52 | 194326 | Idler V-Groove 910" Offset | 187 | 19133210 | Washer |
| 56 | 125907X | V-Belt, Drive | 188 | 194323 | Link Clutch Ground Drive |
| 64 | 196200 | Shaft Asm. Pedal Brake Control | 189 | 194317 | Bellcrank Ground Drive |
| 70 | 193220X428 | Console | 190 | 194318 | Keeper Bellcrank Ground Drive |
| 73 | 74490544 | Bolt Hex 5/16-18 Gr. 5 | 205 | 121748X | Washer 25/32 x 1-5/8 x 16 Ga. |
| 74 | 142432 | Screw 1/4 x 1/2 | 221 | 403187 | Retainer Spring Clip Handle |
| 80 | 408393 | Strap Torque | 231 | 407287 | Idler V-Groove 1.688" Offset |
| 99 | 408418 | Rod Spring Bypass | 232 | 74780716 | Bolt 7/16-14 x 1 Gr 5 |
| 114 | 73800500 | Nut Lock 5/16-18 unc | 233 | 405296 | Washer Serrated |
| 116 | 73900500 | Nut Lock Hex Flange 5/16-18 | 279 | 408538 | Link Shift |
| 121 | 175611 | Bracket Strap Torque | | | |
| 122 | 72010520 | Bolt 5/16-18 x 2.50 | | | |
| 125 | 17000512 | Screw 5/16-18 x 3/4 | | | |
| 153 | 4497H | Retainer Spring 1" | | | |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
ENGINE**

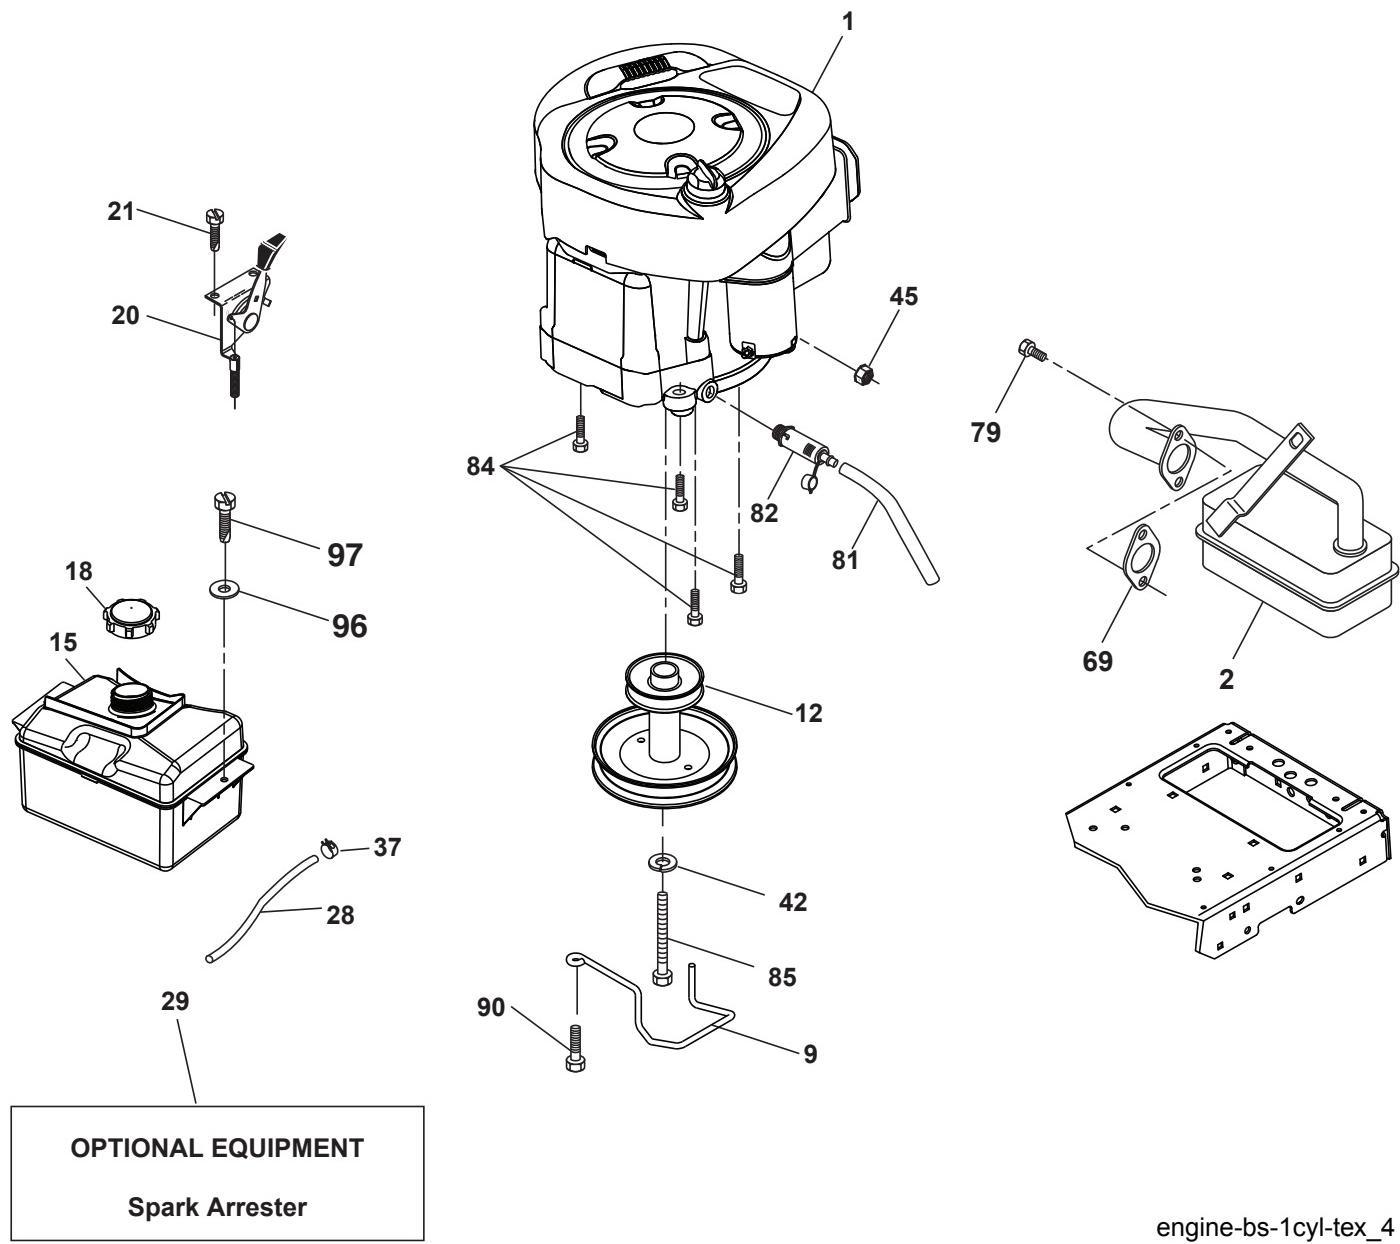

engine-bs-1cyl-tex_4

**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
ENGINE**


| KEY NO. | PART NO. | DESCRIPTION |
|------------|---------------|----------------------------------|
| 1 | ----- | Engine B&S Model No. 31P677 |
| 2 | 137352 | Muffler |
| 9 | 194319 | Keeper Belt Engine |
| 12 | 401985 | Pulley Engine |
| 15 | 407545 | Tank Fuel 1.50 |
| 18 | 425162 | Cap Asm |
| 20 | 176636X421 | Control Throttle/Choke |
| 21 | 416358 | Screw #10 x 0.750 BOS Thread |
| 28 | 401137 | Fuel Line |
| 29 | 137180 | Spark Arrester Kit |
| 37 | 123487X | Clamp Hose |
| 42 | 10040700 | Washer Lock 7/16 |
| 45 | 73510400 | Nut Keps Hex 1/4-20 unc |
| 69 | 165291 | Gasket |
| 79 | 192334 | Screw Socket Hd 5/16-18 x .75 |
| 81 | 148456 | Tube Drain Oil Easy |
| 82 | 181654 | Plug Drain Oil |
| 84 | 17060620 | Screw 3/8-16 x 1-1/4 |
| 85 | 173937 | Bolt Hex 7/16-20 x 4 x Gr. 5-1.5 |
| 90 | 17000616 | Screw 3/8-16 x 1.0 |
| 96 | 19091416 | Washer 9/32 x 7/8 x 16 Ga. |
| 97 | 17670412 | Screw 1/4 - 20 x 3/4 |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J11940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-5). Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net horsepower). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.


**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
STEERING**

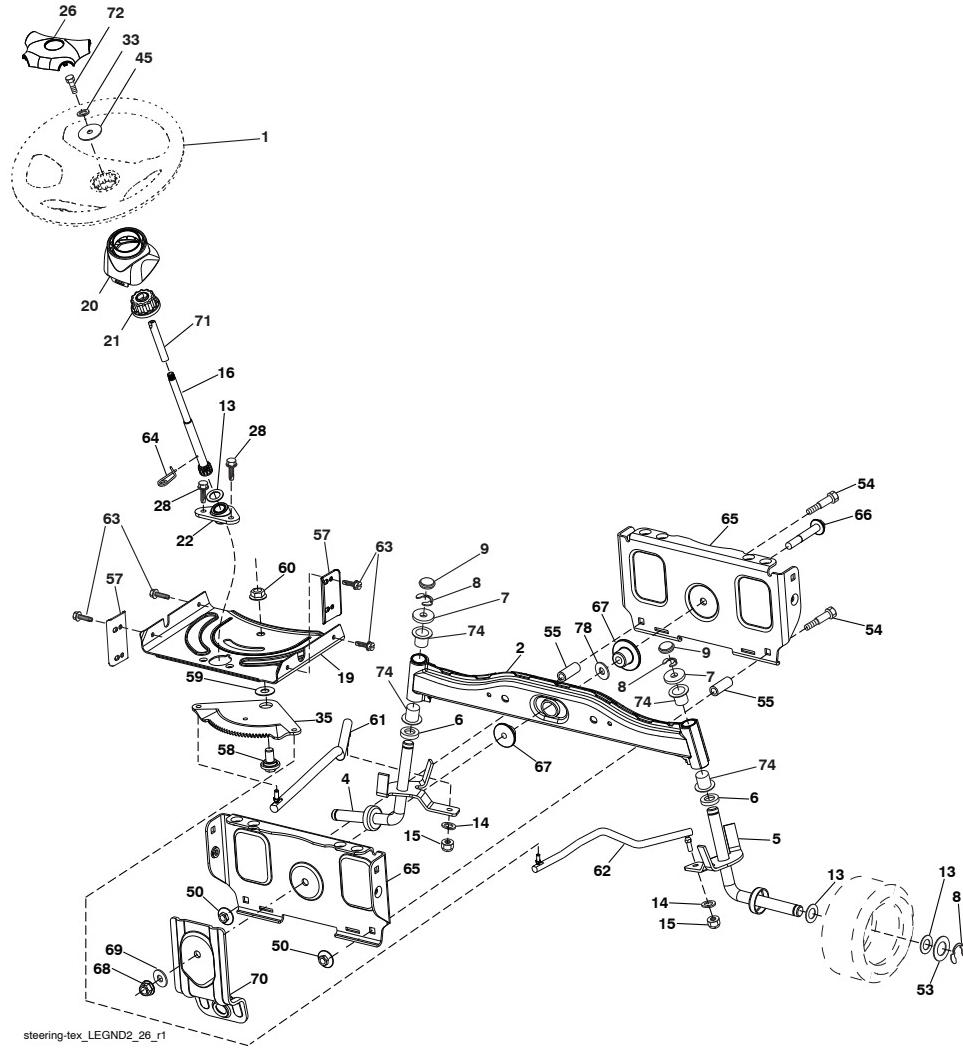

| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|---------|---------------|--------------------------------|---------|--------------|----------------------------------|
| 1 | 414803X428 | Wheel, Steering | 54 | 74760636 | Bolt Hex HS 3/8-16 unc x 2-1/4 |
| 2 | 418168 | Axle Asm., Front | 55 | 414736 | Spacer Brace Axle |
| 4 | 403087 | Spindle Asm., LH | 57 | 407465 | Bracket Upstop |
| 5 | 403088 | Spindle Asm., RH | 58 | 194747 | Bolt Shoulder Sector Pivot CFM |
| 6 | 6266H | Bearing, Race Thrust Harden | 59 | 194748 | Washer Thrust Sector Steering |
| 7 | 121748X | Washer 25/32 x 1-5/8 x 16 Ga. | 60 | 73971000 | Nut Flange Lock 5/8-11 |
| 8 | 12000029 | Ring, Clip #T5304-75 | 61 | 194740 | Draglink, LH |
| 9 | 121232X | Cap, Spindle | 62 | 194741 | Draglink, RH |
| 13 | 121749X | Washer 25/32 x 1-1/4 x 16 Ga. | 63 | 17000512 | Screw 5/16-18 x 3/4 |
| 14 | 10040600 | Washer Lock 3/8 | 64 | 199849 | Retainer Clip Spring Steering |
| 15 | 73540600 | Nut, Crown Lock 3/8-24 unf | 65 | 194734 | Brace Axle Front |
| 16 | 408220 | Shaft Steering | 66 | 71020748 | Bolt Hex Fghd 7/16-14 x 3 Serr |
| 19 | 194729 | Plate Steering | 67 | 194737 | Bushing PM Front Axle |
| 20 | 198375X428 | Boot, Steering | 68 | 73900700 | Nut Lock Flange 7/16-14 Gr. 5 |
| 21 | 186737 | Adapter, Wheel Steering | 69 | 199162 | Washer 1.5 x .505 x .118 |
| 22 | 194845 | Bushing, Strg. Blk | 70 | 196197 | Bracket Deck Susp. Front |
| 26 | 414854X428 | Insert, Wheel Steering | 71 | 196075 | Shaft Ext. Steering |
| 28 | 17000612 | Screw 3/8-16 x 3/4 | 72 | 74780572 | Bolt 5/16-18 x 4.5 Gr. 5 |
| 33 | 10040500 | Washer Lock 5/16 | 74 | 3366R | Bearing |
| 35 | 194732 | Gear, Sector Plate | 78 | 57079 | Washer Thrust .515 x .750 x .033 |
| 45 | 19113812 | Washer 11/32 x 2-3/8 x 12 Ga. | | | |
| 50 | 73900600 | Nut Lock Flg 3/8-16 unc | | | |
| 53 | 188967 | Washer Hardened.793x1.637x.060 | | | |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
SEAT**

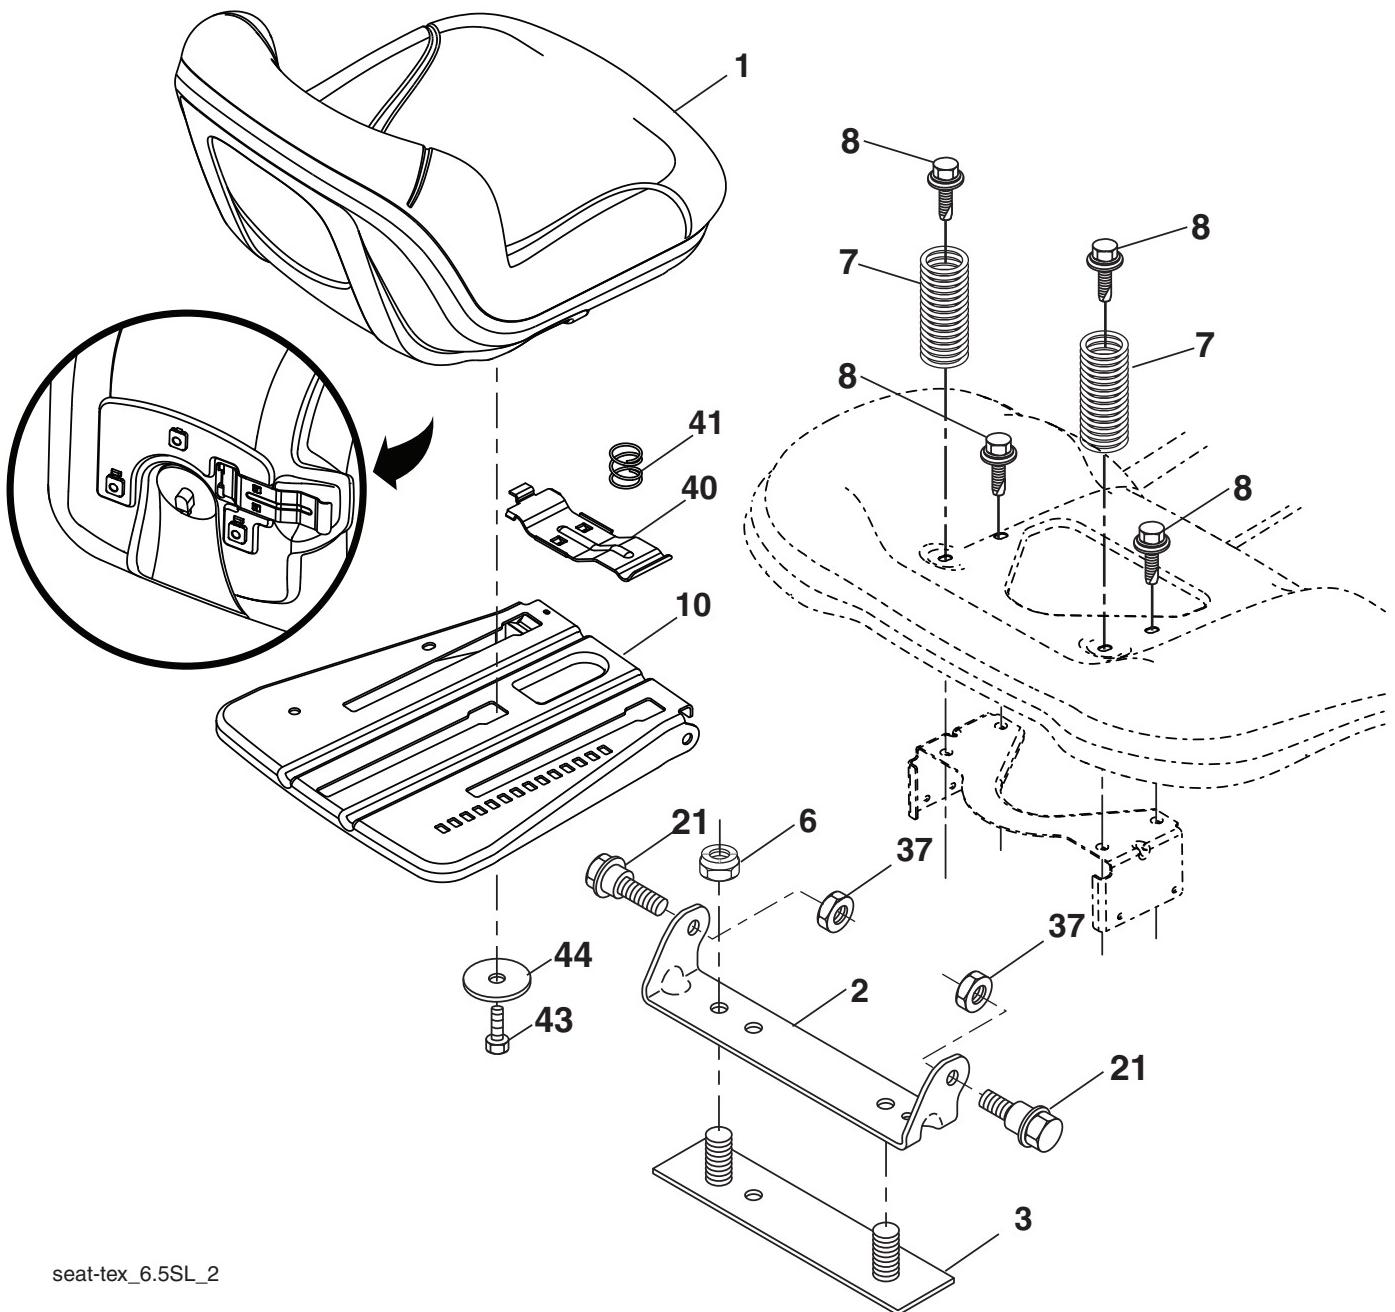


seat-tex_6.5SL_2

| KEY NO. | PART NO. | DESCRIPTION |
|------------|-------------|-------------------------------|
| 1 | 197514 | Seat |
| 2 | 180166 | Bracket Pivot Fender |
| 3 | 140675 | Strap, Asm Fender |
| 6 | 73800600 | Nut, Lock w/Ins. 3/8-16 unc |
| 7 | 124181X | Spring, Seat Cprsn |
| 8 | 171877 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 10 | 196977 | Pan, Seat |
| 21 | 171852 | Bolt, Shoulder 5/16-18 |

| KEY NO. | PART NO. | DESCRIPTION |
|------------|-------------|-------------------------------|
| 37 | 73800500 | Nut, Lock 5/16-18 unc |
| 40 | 197661 | Handle Slide |
| 41 | 198200 | Spring Latch |
| 43 | 74760612 | Bolt 3/8-16 unc x 3/4 |
| 44 | 19133812 | Washer 13/32 x 2 3/8 x 12 Ga. |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
MOWER DECK**

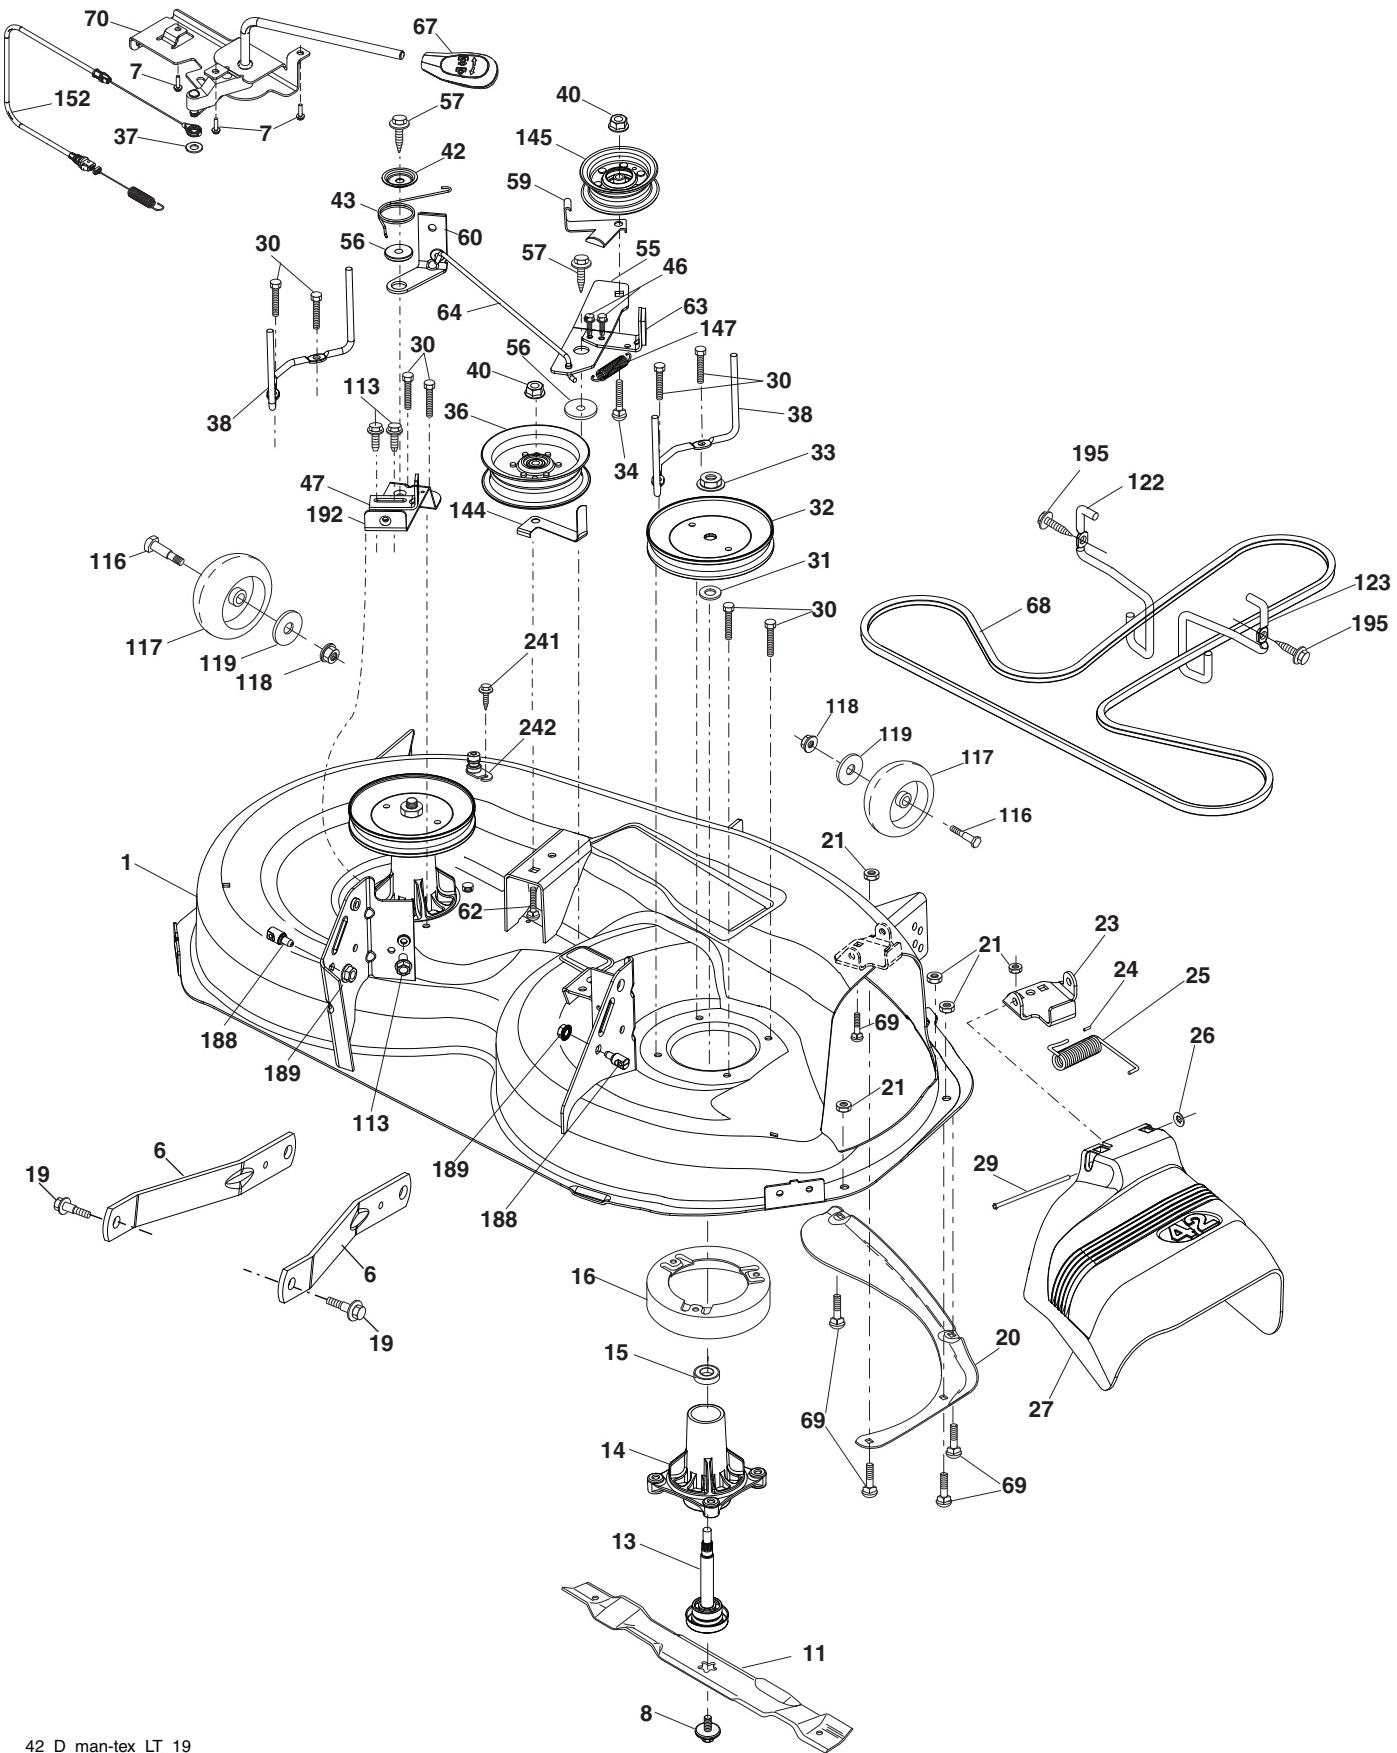


**TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
MOWER DECK**

| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|------------|-------------|--|------------|-------------|---|
| 1 | 196495 | Mower Housing | 56 | 199092 | Spacer, Retainer |
| 6 | 195186 | Arm Suspension | 57 | 17000616 | Screw Hexwsh Thd 3/8-16 x 1 |
| 7 | 416358 | Screw #10 x 0.750 BOS Thread | 59 | 141043 | Guard, Tuv Idler (94) |
| 8 | 193003 | Bolt/Washer Asm 7/16-20 unc | 60 | 197261 | Arm Brake Mower |
| -- | 139775 | Blade, 42" Mulching Premium (For better wear when mulching) | 62 | 72110616 | Bolt Rdhd Sqnk 3/8-16 unc x 2 |
| 11 | 138971 | Blade, 42" Hi-Lift (For bagging or discharge) | 63 | 199477 | Arm Brake Mower |
| -- | 134149 | Blade, 42" Mulching Std (For mulching mowers only) | 64 | 199790 | Linkage Brake |
| 13 | 192872 | Shaft Assembly, Mandrel | 67 | 198398X421 | Handle, Clutch Cable |
| 14 | 187281 | Housing, Mandrel | 68 | 197253 | V-Belt |
| 15 | 110485X | Bearing, Ball, Mandrel | 69 | 72140505 | Bolt Rdhd Sqnk 5/16-18 x 5/8 |
| 16 | 174493 | Stripper, Mower Deck | 70 | 198332 | Clutch Asm. Manual |
| 19 | 196539 | Bolt, Shoulder | 113 | 17000510 | Screw 5/16-18 |
| 20 | 159770 | Baffle, Vortex | 116 | 4898H | Bolt |
| 21 | 73680500 | Nut, Crownlock 5/16-18 unc | 117 | 188606 | Wheel Gauge |
| 23 | 192557 | Bracket, Deflector | 118 | 73930600 | Nut Lock 3/8-16 unc |
| 24 | 105304X | Cap, Sleeve | 119 | 19121414 | Washer 3/8-7/8 x 14 Ga. |
| 25 | 197026 | Spring, Torsion, Deflector | 122 | 197258 | Keeper Belt Eng. LH |
| 26 | 110452X | Nut, Push | 123 | 197259 | Keeper Belt Eng. RH |
| 27 | 193108X428 | Shield, Deflector | 144 | 199204 | Keeper Belt |
| 29 | 131491 | Rod, Hinge | 145 | 193197 | Pulley Idler Primary |
| 30 | 173984 | Screw Thdrol Rolling Wsh Hd | 147 | 401971 | Spring Return |
| 31 | 187690 | Washer, Spacer | 152 | 408714 | Cable Clutch Manual w/Spr. |
| 32 | 197473 | Pulley, Mandrel | 188 | 195161 | Stud Fastener |
| 33 | 400234 | Nut, Toplock, Flanged | 189 | 73900500 | Nut Lock Hex Flange |
| 34 | 72110612 | Bolt Carr Sh. 3/8-16 x 1-1/2 Gr. 5 | 192 | 197260 | Bracket Brake Stand LH |
| 36 | 197379 | Pulley, Idler 4.50 RAW | 195 | 17000612 | Screw Hexwsh Thdr 3/8-16 x 3/4 |
| 37 | 19131316 | Washer 13/32 x 13/16 x 16 Ga. | 241 | 152927 | Vis |
| 38 | 199189 | Keeper Belt LH Mandrel | 242 | 415598 | Port, Washout |
| 40 | 73900600 | Nut, Lock Flg. 3/8-16 unc | -- | 192870 | Mandrel Assembly (Includes housing, shaft assembly, and bearing only - pulley/nut/washer and blade bolt/washers not included) |
| 42 | 197256 | Spring Torsion Retainer | -- | 199608 | Replacement Mower, Complete |
| 43 | 198410 | Spring Torsion Brake | | | |
| 46 | 137729 | Screw Thd Roll 1/4-20 x 5/8 | | | |
| 47 | 197250 | Bracket Clutch Cable | | | |
| 55 | 197249 | Arm, Idler | | | |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
MOWER LIFT**

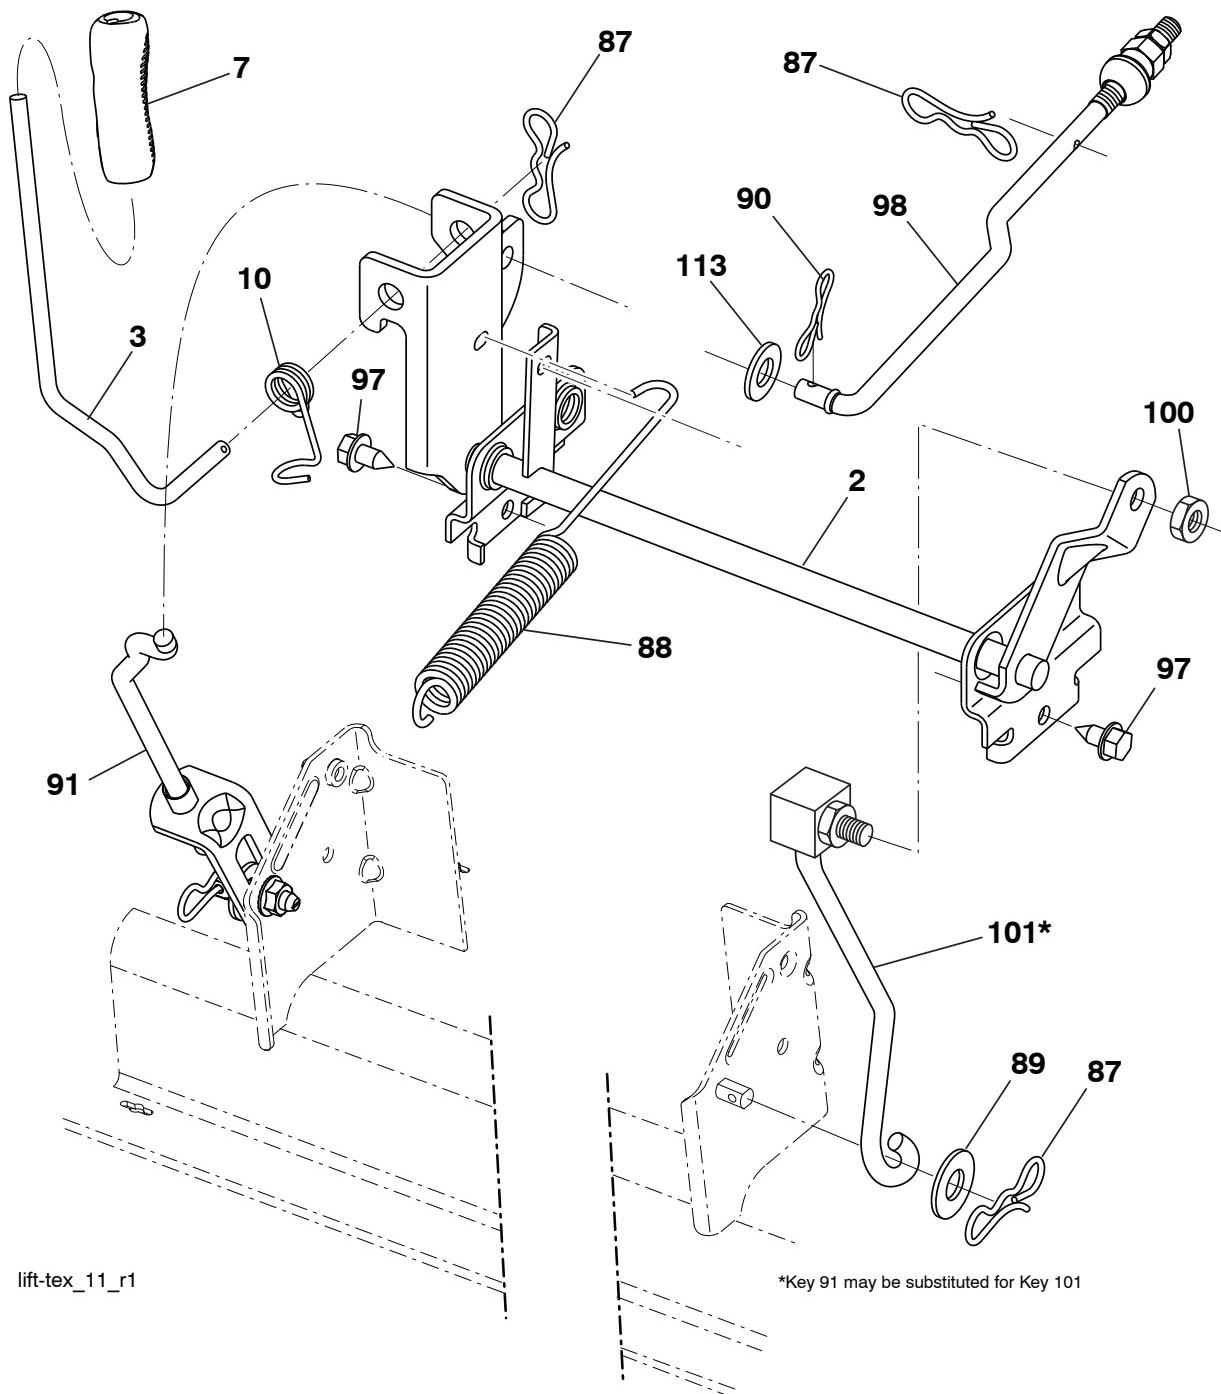


| KEY NO. | PART NO. | DESCRIPTION |
|------------|-------------|------------------------------|
| 2 | 195223 | Shaft Asm., Lift |
| 3 | 195231 | Lever Asm., Lift RH |
| 7 | 196492X421 | Grip, Lever |
| 10 | 196314 | Spring Torsion |
| 87 | 194209 | Pin Cotter 7/16 Bow Tie Lock |
| 88 | 410710 | Spring Lift Assist |
| 89 | 19191912 | Washer Clear Zinc |
| 90 | 194208 | Pin Cotter 5/16 Bow Tie Lock |
| 91 | 195181 | Link Lift Susp Mower Rear |

| KEY NO. | PART NO. | DESCRIPTION |
|------------|-------------|-------------------------------|
| 97 | 17000612 | Screw 3/8-16 x .75 |
| 98 | 195270 | Link Lift Susp. Front Mower |
| 100 | 73930600 | Nut Lock 3/8-16 unc |
| 101 | 407003 | Link Asm lift |
| 113 | 19171912 | Washer 17/32 x 1-3/6 x 12 Ga. |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


TRACTOR -- MODEL NUMBER PB195H42LT (96042003604), PRODUCT NO. 960 42 00-36
DECALS

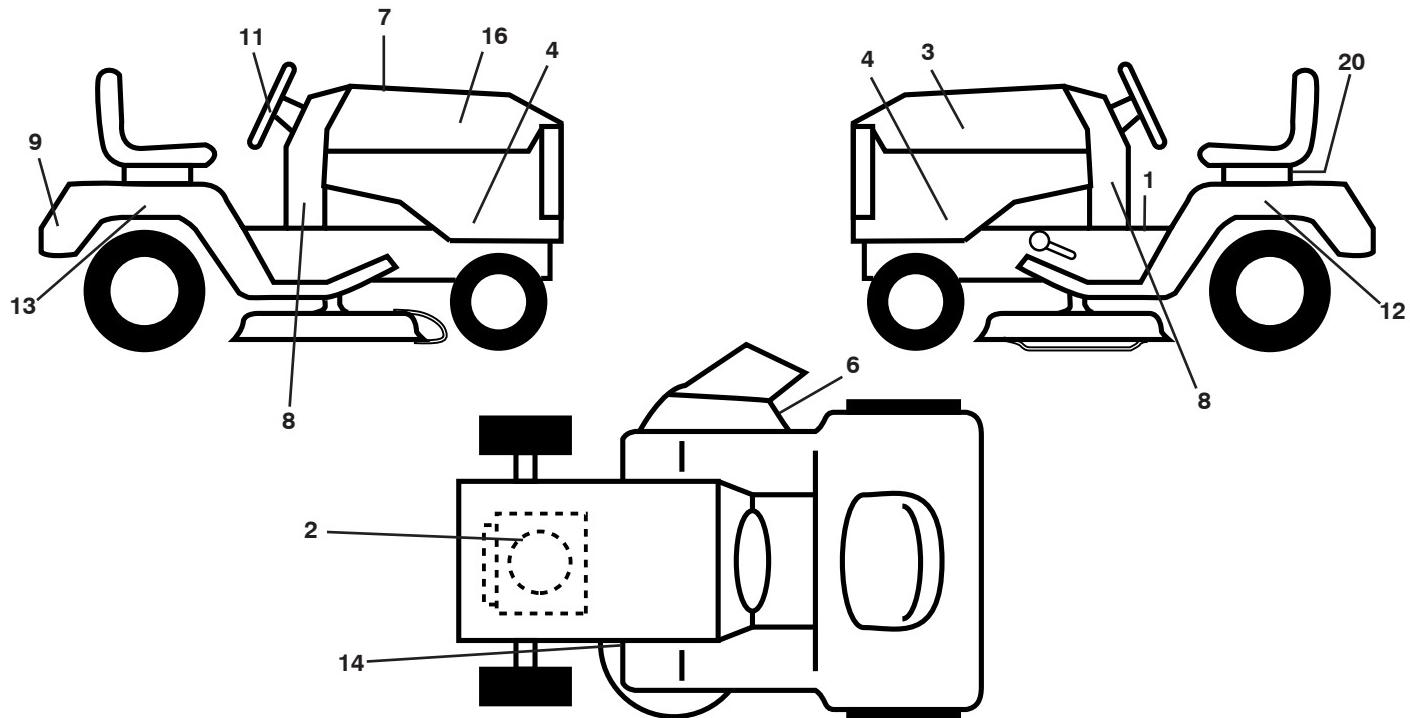

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|-------------------------------|
| 1 | 411658 | Decal Fender Warning |
| 2 | 408834 | Decal Engine H.P. |
| 3 | 186164 | Decal Hood LH |
| 4 | 408794 | Decal Side Panel |
| 6 | 170563 | Decal Warning, Keep Hand Away |
| 7 | 411629 | Decal Replacement Parts |
| 8 | 411175 | Decal LWRDASH |
| 9 | 172740 | Decal Fender Logo |
| 11 | 423398 | Decal Ins Strg Whl |
| 12 | 408948 | Decal Fender SD RH |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|------------|------------------------|
| 13 | 408949 | Decal Fender SD LH |
| 14 | 160396 | Decal V-Belt Schematic |
| 16 | 186163 | Decal Hood RH |
| 20 | 145005 | Decal Bat Dan/Psn |
| -- | 193226X428 | Pad Footrest LH |
| -- | 193277X428 | Pad Footrest RH |
| -- | 166960 | Decal Bypass |
| -- | 411287 | Manual Operator's E&F |
| -- | 426140 | Manual Parts |

WHEELS AND TIRES

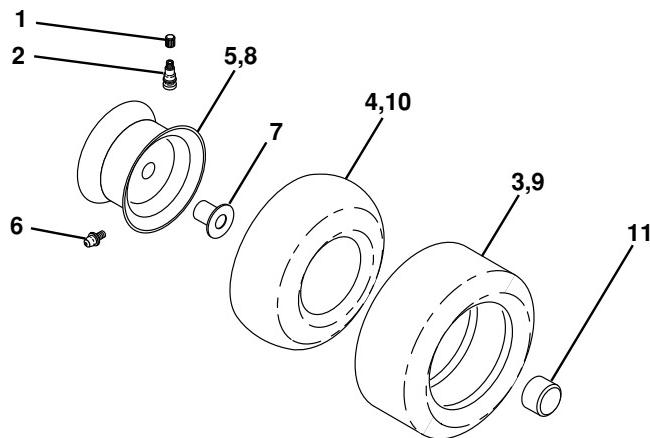

| KEY NO. | PART NO. | DESCRIPTION |
|---------|---------------|-----------------------------------|
| 1 | 59192 | Cap Valve Tire |
| 2 | 65139 | Stem Valve |
| 3 | 106222X | Tire F T 15 x 6 0 - 6 |
| 4 | 59904 | Tube Front |
| 5 | 106732X421 | Rim Asm 6" Front |
| 6 | 278H | Fitting Grease (Front Wheel Only) |
| 7 | 9040H | Bearing Flange (Front Wheel Only) |
| 8 | 106108X421 | Rim Asm 8" Rear |
| 9 | 420531 | Tire R T 18 x 9.5-8 Turf Saver LT |
| 10 | 7152J | Tube Rear |
| 11 | 104757X421 | Cap Axle |
| -- | 144334 | Sealant, Tire (10 oz. Tube) |

NOTE: All component dimensions given in U.S. inches
 1 inch = 25.4 mm

LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

1. This warranty does not apply to the engine, transaxle/transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by the manufacturer.
3. **Battery Warranty:** On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
6. **Exclusions:** Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
7. In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, please contact:

HOP
Outdoor Products Customer Service Dept.
1030 Stevens Creek Road
Augusta, GA 30907 USA

In Canada contact:

HOP
5855 Terry Fox Way
Mississauga, Ontario
L5V 3E4

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.

Poulan PRO


Poulain PRO

GARANTIE LIMITÉE

DÉCALCOMANIE


TRACTEUR - - NUMÉRO DE MODÈLE PB195H42LT (96042003604), NO. DE PRODUIT 960 42 00-36

| NO. | NO | REF. | PIECE | DESCRIPTION |
|-----|------------|------------|--|--|
| NO. | NO | REF. | PIECE | DESCRIPTION |
| 1 | 411658 | 408834 | Décalcomanie avertissement du pare-chocs SD C.G. | Décalcomanie avertissement du pare-chocs SD C.G. |
| 2 | 186164 | 160396 | Décalcomanie du capot | Décalcomanie de la courroie rapézoïdale |
| 3 | 186163 | 186163 | Décalcomanie du capot | Décalcomanie du panneau latéral |
| 4 | 140894 | 1408949 | Décalcomanie du pare-chocs SD C.G. | Décalcomanie du pare-chocs SD C.G. |
| 5 | 170563 | 160396 | Décalcomanie du pare-chocs SD C.G. | Décalcomanie avertissement du pare-chocs SD C.G. |
| 6 | 1408794 | 186163 | Décalcomanie du capot | Décalcomanie du capot |
| 7 | 411629 | 166960 | Décalcomanie de l'WWDASH | Décalcomanie de la batterie |
| 8 | 193226X428 | 193226X428 | Coussin d'appui-pied C.G. | Coussin d'appui-pied C.G. |
| 9 | 172740 | 193227X428 | Décalcomanie de l'ailie Husqvarna | Décalcomanie de l'ailie Husqvarna |
| 10 | 423398 | 411287 | Décalcomanie de l'insert | Coussin d'appui-pied C.G. |
| 11 | 408948 | 426140 | Décalcomanie de Pare-chocs SD C.D. | Décalcomanie de Pare-chocs SD C.D. |
| 12 | -- | -- | -- | Manuel de pièces |

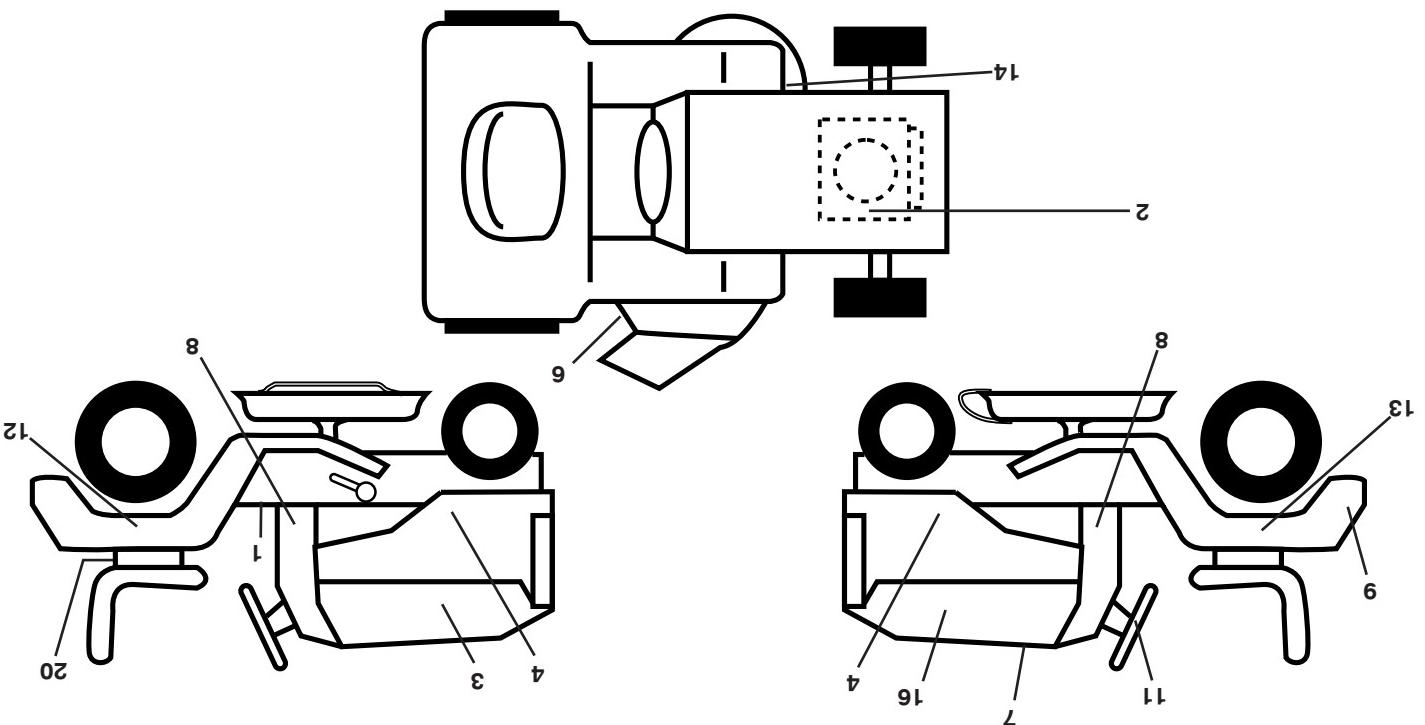


REMARQUE: Toutes les dimensions de composant sont don-
nées en pouces E.-U. -- 1 pouce = 25,4 mm

| 1 | NO. | REF. | DE PIECE | DESCRIPTION |
|----|------------|------------|--|--|
| 2 | 59192 | 65139 | Capuchon de la valve | Capuchon de la valve du pneu |
| 3 | 106222X | 106222X | Tubulure de la valve | Tubulure de la valve du pneu |
| 4 | 59904 | 59904 | Chambre à air antérieure | Pneu antérieur 15 X 6 0 - 6 |
| 5 | 106732X421 | 106732X421 | Grissier (roue antérieure seulement) | Pneu arrière R T 18 X 9.5-8 Turf Saver LT |
| 6 | 278H | 278H | Paire de bride (roue antérieure seulement) | Pneu arrière R T 18 X 9.5-8 Turf Saver LT |
| 7 | 9040H | 106108X421 | Ensemble de la jante arrière | Pneu arrière R T 18 X 9.5-8 Turf Saver LT |
| 8 | 420531 | 104757X421 | Paire de bride (roue antérieure seulement) | Pneu arrière R T 18 X 9.5-8 Turf Saver LT |
| 9 | 7152J | 7152J | Chambre à air arrière | Pneu arrière R T 18 X 9.5-8 Turf Saver LT |
| 10 | -- | 144334 | Joint d'étanchéité de pneu (tube de 30L [10 oz. Tube]) | Joint d'étanchéité de pneu (tube de 30L [10 oz. Tube]) |
| 11 | -- | -- | Chapeau de lessive | Chapeau de lessive |

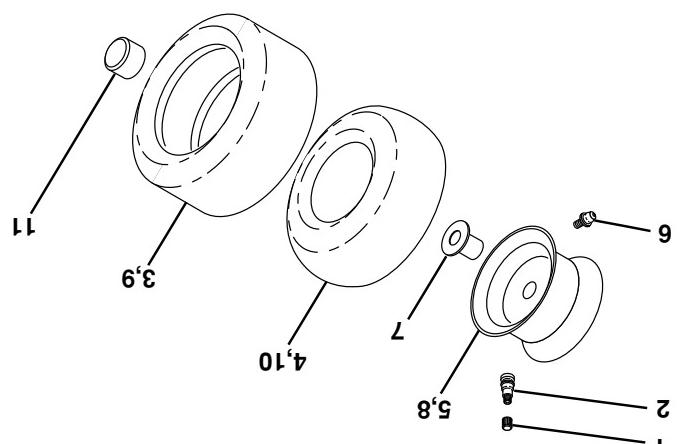

ROUES & PNEUS


| NO. | NO. DE PIÈCE | DESCRIPTION | REF. DE PIÈCE | NO. DE |
|-----|--------------|---|---------------|-----------------|
| 2 | 195223 | Ensemble de l'arbre | 97 | 17000612 |
| 3 | 195231 | Ensemble de l'ensemble C.D. | 98 | 195270 |
| 7 | 196492X421 | Poignée | 97 | 17000612 |
| 87 | 196314 | Ressort de torsion | 98 | VIS 3/8-16 X 75 |
| 88 | 194209 | Goupille fendue 7/16 | 97 | 17000612 |
| 89 | 19191912 | Rondelle | 98 | 195270 |
| 90 | 194208 | Goupille fendue 5/16 | 97 | 17000612 |
| 91 | 195181 | Relier l'arriére de Tondeuse à gazon de d'Ascenseur | 98 | VIS 3/8-16 UNC |

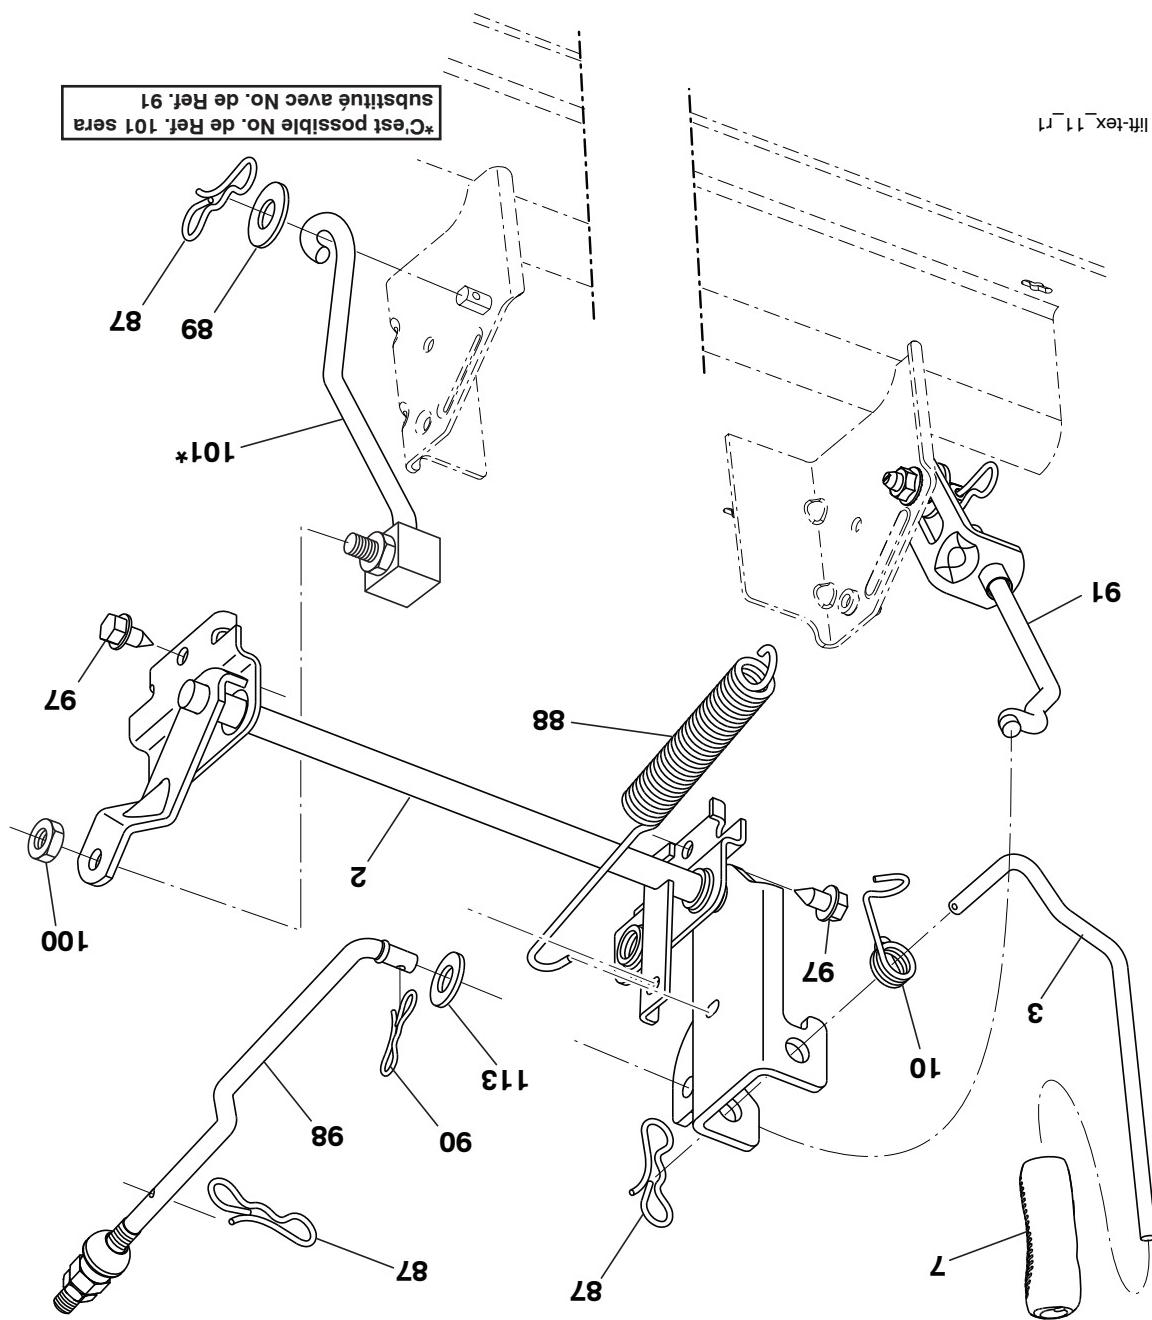


| NO. | NO. | DE | PIECE | DESCRIPTION | DE | PIECE | DESCRIPTION | DE | PIECE | DESCRIPTION | |
|-----|------------|-----------------------------------|-------|-------------|-------------------------------------|-------|-------------|-------------------------------------|-------|-------------|-------------------------------------|
| 1 | 196495 | Boutier de rondueuse | 56 | 199092 | Entretiise | 56 | 199092 | Entretiise | 56 | 199092 | Entretiise |
| 2 | 139775 | 7/16-20 uit | 62 | 72110616 | Boulon /8-16 unc x 2 | 62 | 72110616 | Boulon /8-16 unc x 2 | 62 | 72110616 | Boulon /8-16 unc x 2 |
| 3 | 138971 | (Pour mieux l'usure quand paille) | 63 | 199477 | Levier de frein | 63 | 199477 | Levier de frein | 63 | 199477 | Levier de frein |
| 4 | 134149 | La lame, 42" Palier Standard | 64 | 199790 | Raccord | 64 | 199790 | Raccord | 64 | 199790 | Raccord |
| 5 | 110485X | Roulement à billes du Mandrin | 65 | 198398X421 | Guidon du câble d'embarayage | 65 | 198398X421 | Guidon du câble d'embarayage | 65 | 198398X421 | Guidon du câble d'embarayage |
| 6 | 195186 | Ensemble du Boulon/Rondelle | 66 | 197261 | Protecteur | 66 | 197261 | Protecteur | 66 | 197261 | Protecteur |
| 7 | 416358 | Vis #10 x .750 | 67 | 198398X421 | La lame, 42" Palier la Prime | 67 | 198398X421 | La lame, 42" Palier la Prime | 67 | 198398X421 | La lame, 42" Palier la Prime |
| 8 | 193003 | Ensemble du Boulon/Rondelle | 68 | 197253 | Courroie trapézoïdale | 68 | 197253 | Courroie trapézoïdale | 68 | 197253 | Courroie trapézoïdale |
| 9 | 134149 | (Pour paille des rondesuses à | 69 | 72140505 | Boulon /5-16 18 X 5/8 | 69 | 72140505 | Boulon /5-16 18 X 5/8 | 69 | 72140505 | Boulon /5-16 18 X 5/8 |
| 10 | 174493 | Roulement à épaulement | 70 | 198332 | Ensemble du membrayage | 70 | 198332 | Ensemble du membrayage | 70 | 198332 | Ensemble du membrayage |
| 11 | 138971 | (Pour mieux l'usure quand paille) | 71 | 17000510 | Vis 5/16-18 | 71 | 17000510 | Vis 5/16-18 | 71 | 17000510 | Vis 5/16-18 |
| 12 | 187281 | Carter du mandrin | 72 | 188606 | Boulon | 72 | 188606 | Boulon | 72 | 188606 | Boulon |
| 13 | 192872 | Ensemble de l'arbre | 73 | 4898H | Boulon | 73 | 4898H | Boulon | 73 | 4898H | Boulon |
| 14 | 159770 | Chicago | 74 | 1912144 | Rondelle 3/8-7/8 X 14 ja. | 74 | 1912144 | Rondelle 3/8-7/8 X 14 ja. | 74 | 1912144 | Rondelle 3/8-7/8 X 14 ja. |
| 15 | 73680500 | Ecrou auto-serrant 5/16-18 unc | 75 | 197258 | Guide-courroie du Moteur C.G. | 75 | 197258 | Guide-courroie du Moteur C.G. | 75 | 197258 | Guide-courroie du Moteur C.G. |
| 16 | 192557 | Ecrou auto-serrant 5/16-18 unc | 76 | 199204 | Guide-courroie | 76 | 199204 | Guide-courroie | 76 | 199204 | Guide-courroie |
| 17 | 105304X | Chapeau de manchon | 77 | 193197 | Poulie de tension principal | 77 | 193197 | Poulie de tension principal | 77 | 193197 | Poulie de tension principal |
| 18 | 110452X | Frein écrois | 78 | 408714 | Ressort de rappel | 78 | 408714 | Ressort de rappel | 78 | 408714 | Ressort de rappel |
| 19 | 197026 | Ressort de torsion | 79 | 197260 | Support C.G. | 79 | 197260 | Support C.G. | 79 | 197260 | Support C.G. |
| 20 | 1596539 | Boulon à épaulement | 80 | 197259 | Guide-courroie du Moteur C.D. | 80 | 197259 | Guide-courroie du Moteur C.D. | 80 | 197259 | Guide-courroie du Moteur C.D. |
| 21 | 73680500 | Ecrou auto-serrant 5/16-18 unc | 81 | 1912144 | Rondelle 3/8-7/8 X 14 ja. | 81 | 1912144 | Rondelle 3/8-7/8 X 14 ja. | 81 | 1912144 | Rondelle 3/8-7/8 X 14 ja. |
| 22 | 123 | 197258 | 82 | 197259 | Guide-courroie du Moteur C.G. | 82 | 197259 | Guide-courroie du Moteur C.G. | 82 | 197259 | Guide-courroie du Moteur C.G. |
| 23 | 192557 | Ecrou auto-serrant 5/16-18 unc | 83 | 199204 | Guide-courroie | 83 | 199204 | Guide-courroie | 83 | 199204 | Guide-courroie |
| 24 | 105304X | Chapeau de manchon | 84 | 193197 | Poulie de tension principal | 84 | 193197 | Poulie de tension principal | 84 | 193197 | Poulie de tension principal |
| 25 | 197026 | Ressort de torsion | 85 | 197260 | Support C.G. | 85 | 197260 | Support C.G. | 85 | 197260 | Support C.G. |
| 26 | 110452X | Frein écrois | 86 | 197259 | Guide-courroie | 86 | 197259 | Guide-courroie | 86 | 197259 | Guide-courroie |
| 27 | 193108X428 | Déflecteur de décharge | 87 | 198332 | Ressort de rappel | 87 | 198332 | Ressort de rappel | 87 | 198332 | Ressort de rappel |
| 28 | 131491 | Tige à charnière | 88 | 195161 | Attache | 88 | 195161 | Attache | 88 | 195161 | Attache |
| 29 | 193108X428 | Déflecteur de décharge | 89 | 73900500 | Écrois frein | 89 | 73900500 | Écrois frein | 89 | 73900500 | Écrois frein |
| 30 | 187690 | Vis à filets laminés | 90 | 17000612 | Vis 3/8-16 X 3/4 | 90 | 17000612 | Vis 3/8-16 X 3/4 | 90 | 17000612 | Vis 3/8-16 X 3/4 |
| 31 | 173984 | Entretiise | 91 | 197260 | Support C.G. | 91 | 197260 | Support C.G. | 91 | 197260 | Support C.G. |
| 32 | 197473 | Poulie du Mandrin | 92 | 152927 | Vis | 92 | 152927 | Vis | 92 | 152927 | Vis |
| 33 | 400234 | Ecrou | 93 | 415598 | Raccord de lavage du plateau de | 93 | 415598 | Raccord de lavage du plateau de | 93 | 415598 | Raccord de lavage du plateau de |
| 34 | 72110612 | Boulon 3/8-16 X 1-1/2 Gr. 5 | 94 | 192870 | Coupe | 94 | 192870 | Coupe | 94 | 192870 | Coupe |
| 35 | 197379 | Poulie de tension, 4.50 RAW | 95 | 17000612 | Ensemble arbre | 95 | 17000612 | Ensemble arbre | 95 | 17000612 | Ensemble arbre |
| 36 | 197379 | Poulie de tension, 4.50 RAW | 96 | 199092 | Boîtier de rondueuse | 96 | 199092 | Boîtier de rondueuse | 96 | 199092 | Boîtier de rondueuse |
| 37 | 19131316 | Rondelle 13/32 X 13/16 X 16 ja. | 97 | 198332 | Seullement - Poulie/écrois/rondelle | 97 | 198332 | Seullement - Poulie/écrois/rondelle | 97 | 198332 | Seullement - Poulie/écrois/rondelle |
| 38 | 199189 | Guide-courroie du Mandrin C.G. | 98 | 197259 | Boîtier, ensemble arbre, et paliere | 98 | 197259 | Boîtier, ensemble arbre, et paliere | 98 | 197259 | Boîtier, ensemble arbre, et paliere |
| 39 | 73900600 | Ecrou frein 3/8-16 unc | 99 | 198332 | et lame, boulon/rondelle ne pas | 99 | 198332 | et lame, boulon/rondelle ne pas | 99 | 198332 | et lame, boulon/rondelle ne pas |
| 40 | 198410 | Bondir le Torsion de retenue | 100 | 199608 | La rondueuse à gazon de remplace- | 100 | 199608 | La rondueuse à gazon de remplace- | 100 | 199608 | La rondueuse à gazon de remplace- |
| 41 | 137729 | Vis 1/4-20 X 5/8 | 101 | 199608 | ment, Complet er | 101 | 199608 | ment, Complet er | 101 | 199608 | ment, Complet er |
| 42 | 197256 | Bondir le Torsion de retenue | 102 | 199608 | La rondueuse à gazon de remplace- | 102 | 199608 | La rondueuse à gazon de remplace- | 102 | 199608 | La rondueuse à gazon de remplace- |
| 43 | 198410 | Bondir le Torsion de retenue | 103 | 199608 | ment, Complet er | 103 | 199608 | ment, Complet er | 103 | 199608 | ment, Complet er |
| 44 | 198410 | Bondir le Torsion de retenue | 104 | 199608 | La rondueuse à gazon de remplace- | 104 | 199608 | La rondueuse à gazon de remplace- | 104 | 199608 | La rondueuse à gazon de remplace- |
| 45 | 197249 | Vis 1/4-20 X 5/8 | 105 | 199608 | ment, Complet er | 105 | 199608 | ment, Complet er | 105 | 199608 | ment, Complet er |
| 46 | 198410 | Bondir le Torsion de retenue | 106 | 199608 | La rondueuse à gazon de remplace- | 106 | 199608 | La rondueuse à gazon de remplace- | 106 | 199608 | La rondueuse à gazon de remplace- |
| 47 | 197250 | Support du câble d'embarayage | 107 | 199608 | ment, Complet er | 107 | 199608 | ment, Complet er | 107 | 199608 | ment, Complet er |
| 48 | 197249 | Vis 1/4-20 X 5/8 | 108 | 199608 | La rondueuse à gazon de remplace- | 108 | 199608 | La rondueuse à gazon de remplace- | 108 | 199608 | La rondueuse à gazon de remplace- |
| 49 | 197249 | Vis 1/4-20 X 5/8 | 109 | 199608 | ment, Complet er | 109 | 199608 | ment, Complet er | 109 | 199608 | ment, Complet er |
| 50 | 197249 | Vis 1/4-20 X 5/8 | 110 | 199608 | La rondueuse à gazon de remplace- | 110 | 199608 | La rondueuse à gazon de remplace- | 110 | 199608 | La rondueuse à gazon de remplace- |
| 51 | 197249 | Vis 1/4-20 X 5/8 | 111 | 199608 | ment, Complet er | 111 | 199608 | ment, Complet er | 111 | 199608 | ment, Complet er |
| 52 | 197249 | Vis 1/4-20 X 5/8 | 112 | 199608 | La rondueuse à gazon de remplace- | 112 | 199608 | La rondueuse à gazon de remplace- | 112 | 199608 | La rondueuse à gazon de remplace- |
| 53 | 197249 | Vis 1/4-20 X 5/8 | 113 | 199608 | ment, Complet er | 113 | 199608 | ment, Complet er | 113 | 199608 | ment, Complet er |
| 54 | 197249 | Vis 1/4-20 X 5/8 | 114 | 199608 | La rondueuse à gazon de remplace- | 114 | 199608 | La rondueuse à gazon de remplace- | 114 | 199608 | La rondueuse à gazon de remplace- |
| 55 | 197249 | Vis 1/4-20 X 5/8 | 115 | 199608 | ment, Complet er | 115 | 199608 | ment, Complet er | 115 | 199608 | ment, Complet er |

TRACTEUR DE RONDUEUSE - NUMERO DE MODÈLE PB195H42LT (96042003604), NO. DE PRODUIT 960 42 00-36

CARTER DE RONDUEUSE

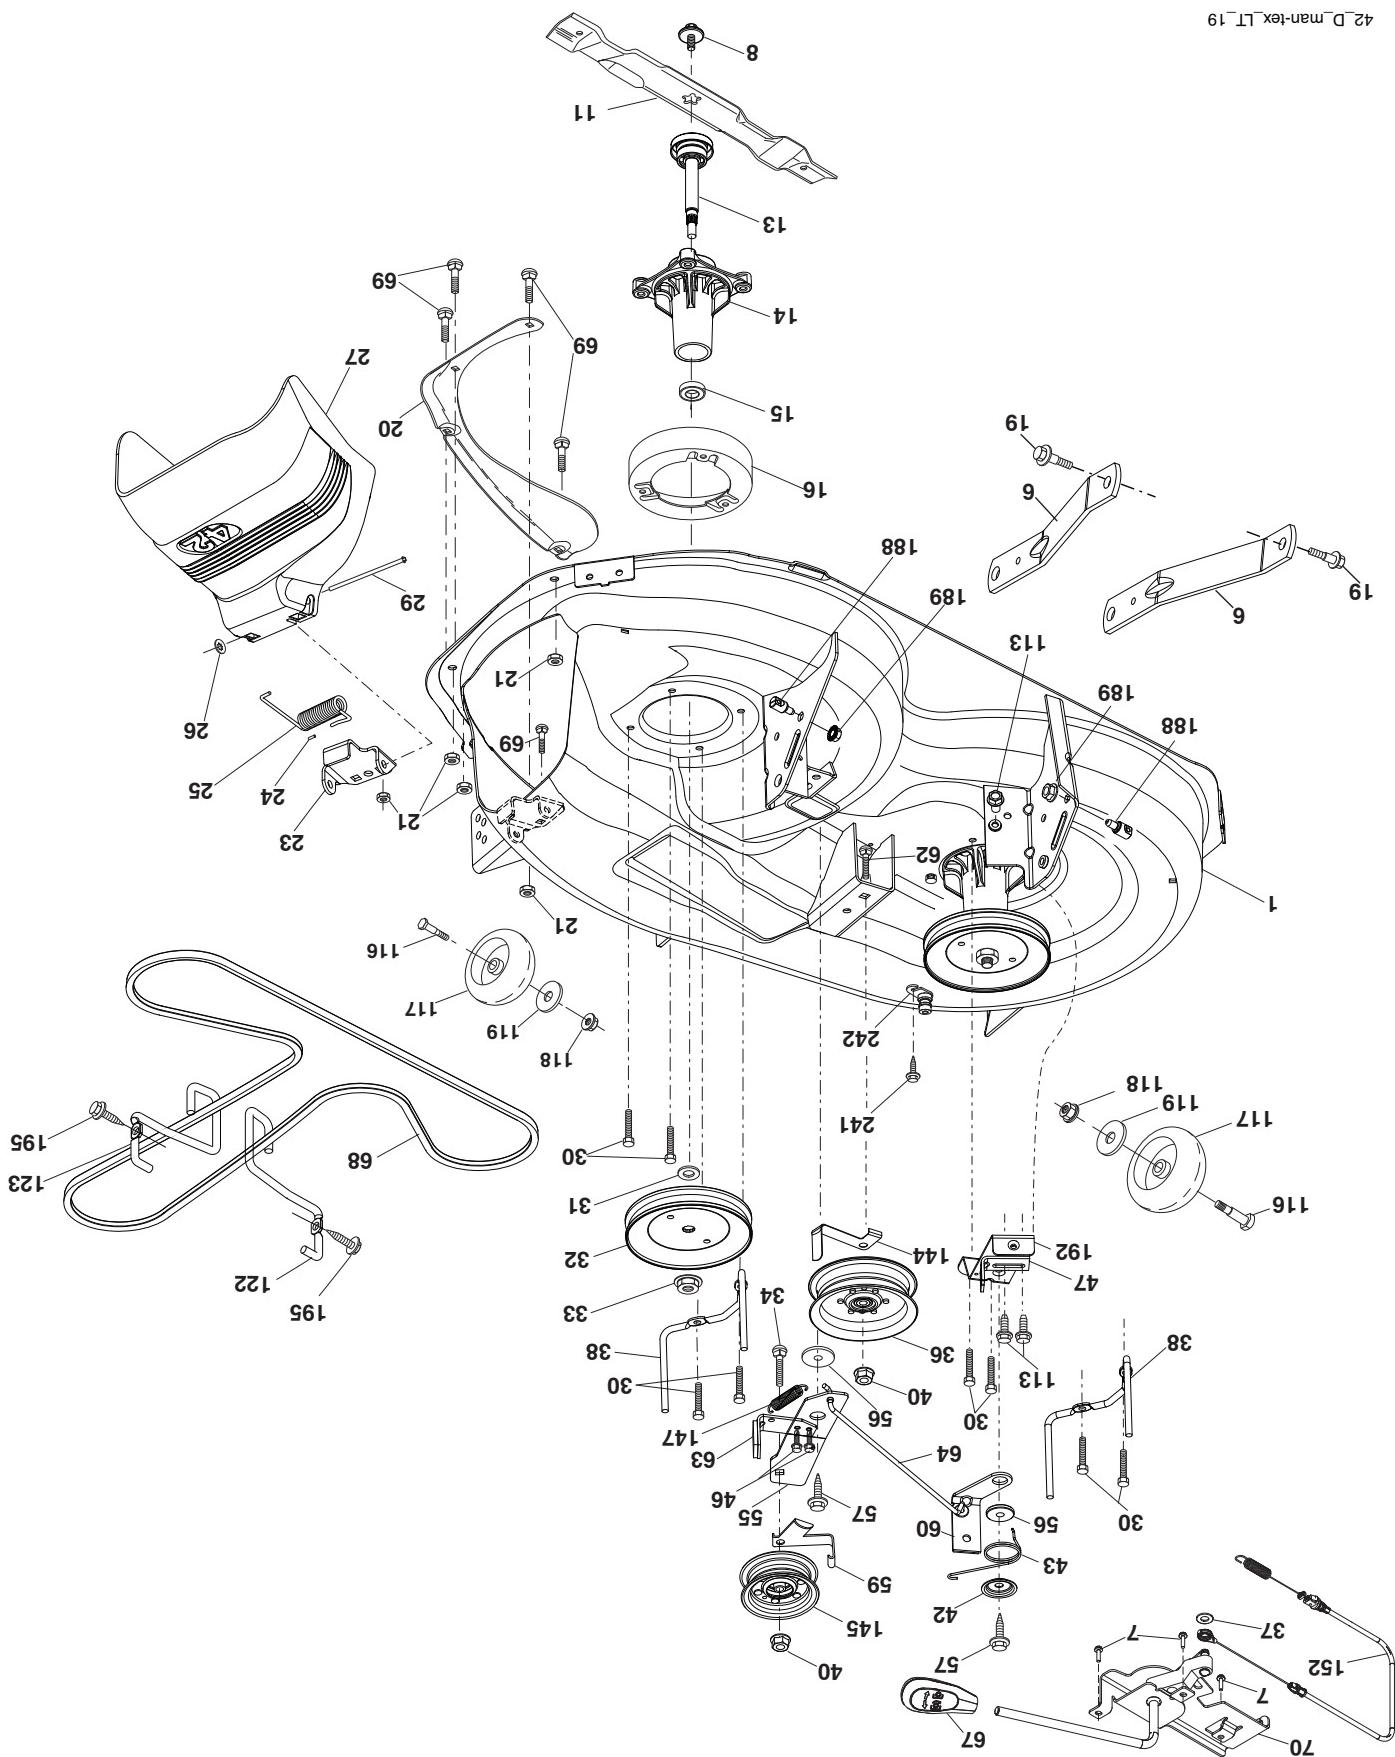


| NO. | NO. | REF. DE PIECE | DESCRIPTION | REF. DE PIECE | DESCRIPTION | |
|-----|----------|----------------------------------|---|---------------|-------------|-----------------------------|
| 1 | 197514 | Chaise | Support le Pare-chocs de Pivot | 37 | 73800500 | Ecrou frein 5/16-18 unc |
| 2 | 180166 | Support le Pare-chocs de Pivot | Ecrou frein 5/16-18 unc | 40 | 197661 | Contrôler la Chute |
| 3 | 140675 | Sanglier, le Pare-chocs ensemble | Bondir le Lopuet | 41 | 198200 | Bondir le Lopuet |
| 6 | 73800600 | Ecrof frein 3/8-16 unc | Boulin 3/8-16 unc x 3/4 | 43 | 74760612 | Boulin 5/16-18 unc x 3/4 |
| 7 | 171877 | Ressort du siège | Rondelle 13/32 x 2 3/8 x 12 ja. | 44 | 19133812 | Boulon à épaulement 5/16-18 |
| 8 | 196977 | Bac du siège | données en Pouces E.-U. -- 1 pouce = 25,4 mm. | | | |
| 10 | 171852 | Boulon à siège | REMARQUE: Toutes les dimensions de composant sont | | | |

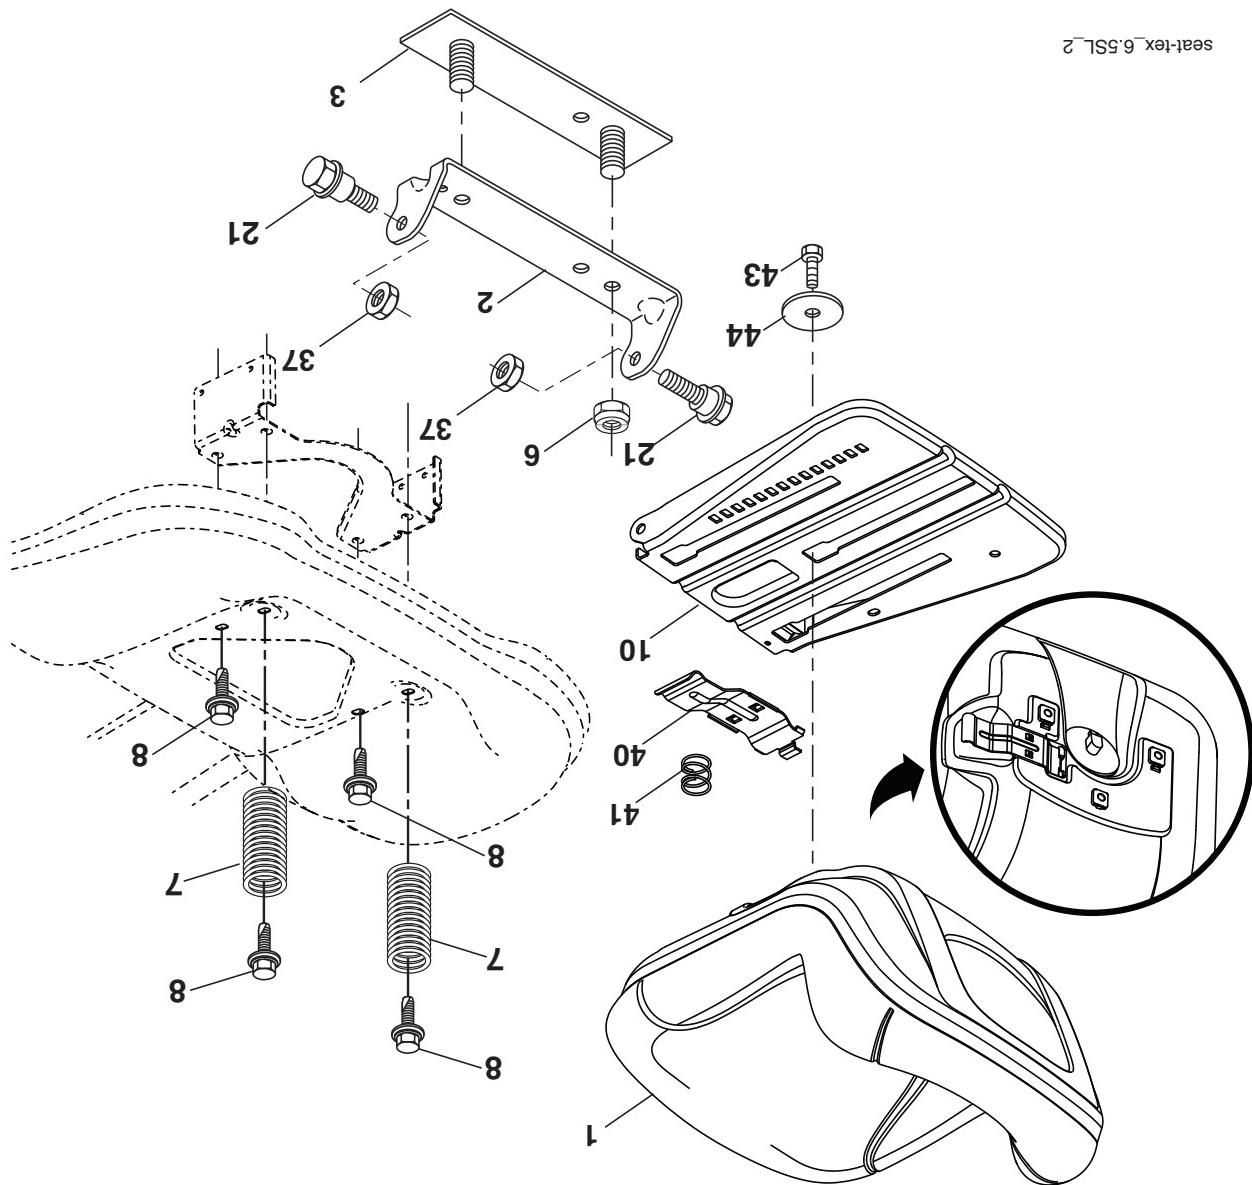

REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. -- 1 pouce = 25,4 mm.

| NO. | NO. | DE | DE | PIÈCE | DESCRIPTION |
|-----|------------|-----------------------------------|----|----------|----------------------------------|
| 1 | 414803X428 | Volant de direction | 55 | 414736 | Essieu d'entretoise |
| 2 | 418168 | Ensemble d'essieu devant | 57 | 407465 | Essieu d'arrêt supérieur |
| 4 | 403087 | Ensemble d'essieu devant | 55 | 414736 | Essieu d'entretoise |
| 5 | 403088 | Ensemble de fuscau, C.G. | 57 | 414736 | Volant de direction |
| 6 | 6266H | Ensemble de fuscau, C.D. | 57 | 407465 | Ensemble d'essieu devant |
| 7 | 121748X | Paire | 58 | 194747 | Boulon à épaulement |
| 8 | 12000029 | Baguette #T5304-75 | 59 | 194748 | Rondelle butée |
| 9 | 121232X | Couplaison broche | 61 | 194740 | Barre de direction, C.G. |
| 13 | 121749X | Rondelle 25/32 X 1-1/4 X 16 ja. | 62 | 194741 | Barre de direction, C.D. |
| 14 | 40040600 | Rondelle frein 3/8 | 63 | 17000512 | Vis 5/16-18 X 3/4 |
| 15 | 73540600 | Rondelle-serrant 3/8-24 unit | 64 | 199849 | ressort de retenue |
| 16 | 408220 | Arbre de direction | 65 | 194734 | Moisie du essieu devant |
| 19 | 194729 | Arbre de direction | 66 | 71020748 | Boulon 7/16-14 X 3 |
| 20 | 198375X428 | Plaquettes de direction | 67 | 194737 | Douille du essieu devant |
| 21 | 186737 | Adaptateur du volant de direction | 68 | 73900700 | Ecroû frein 7/16-14 Gr. 5 |
| 22 | 194845 | Adaptateur du volant de direction | 69 | 199162 | Rondelle 1 5 X 505 X 118 |
| 26 | 414854X428 | Bagne | 70 | 196197 | Rondelle Pousser. 515X.750X.033 |
| 28 | 17000612 | Insertion du volant de direction | 71 | 196075 | L'arbre d'extension de direction |
| 33 | 10040500 | Vis 3/8-16 X 3/4 | 72 | 74780572 | Boulon 5/16-18 X 4.5 Gr. 5 |
| 35 | 194732 | Secteur denté | 74 | 3366R | Douille |
| 45 | 19113812 | Rondelle 1 1/32 X 2-3/8 X 12 ja. | 78 | 57079 | Rondelle Pousser. 515X.750X.033 |
| 50 | 73900600 | Ecrou frein 3/8-16 unc | 74 | 3366R | Rondelle .793 X 1.637 X .060 |
| 53 | 188967 | Rondelle .793 X 1.637 X .060 | 78 | 57079 | Boulon HS 3/8-16 unc X 2-1/4 |
| 54 | 74760636 | | | | |

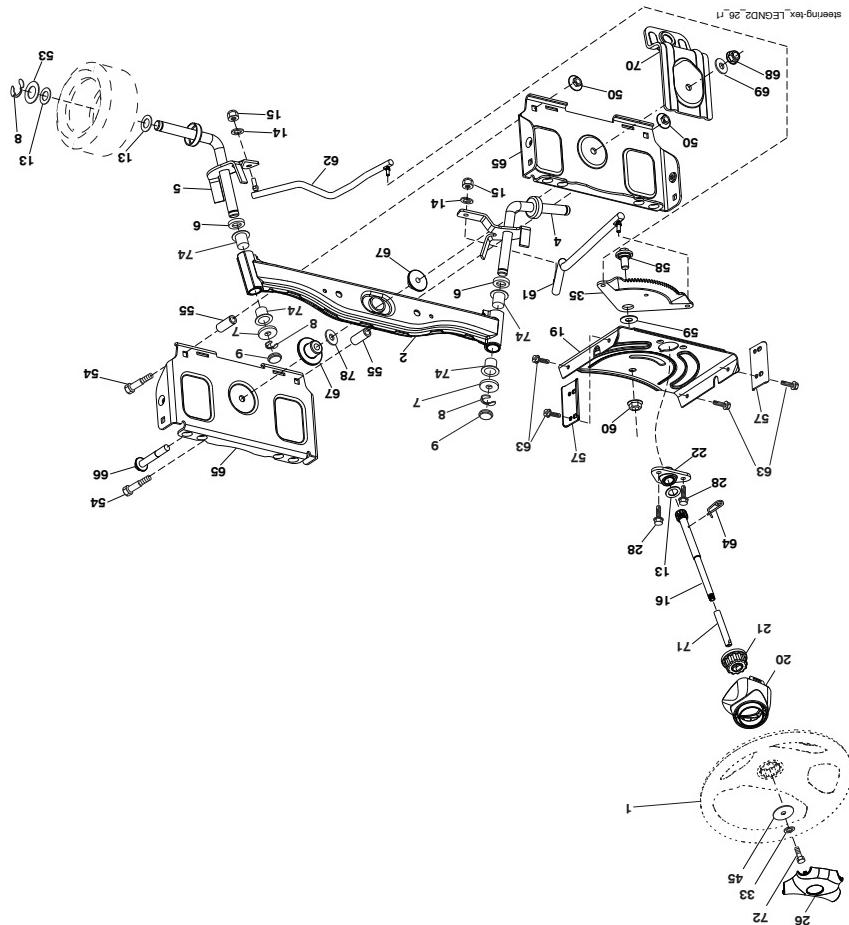

plus haut pouvoir évaluer pour ce moteur de Feuilleton.

Variaibilité de moteur. En raison des limitations de fabrication et capacite, Briggs & Stratton peut substituer un moteur de limitations d'application, les conditions d'opération ambiantes (la température, l'humidité, l'altitude), et le moteur-a-la-solres (le nettoyeur d'air, l'échappement, charger, le refroidissement, le carburateur, la pompe de carburant, etc.), les sur place » ou nette). Cette différence est en raison d'une assortiment de facteurs inclut, mais pas limite à, les accès-épuisance verticale « le pouvoir de grosse évaluer quant utilise dans un morceau donne d'équipement de pouvoi (la puissance verticale, « et la variété de problèmes écologiques applicables à l'opération de moteur. Donne les deux tableau large de gaz ne développement pas variabale pouvoir de moteur brut sera plus bas et est affecté par, entre autres choses, les conditions d'opération ambiantes et le moteur-a-la-variaibilité de moteur. Donne les deux tableau large de produits moteurs est placé verticale pouvoir de moteur brut corrige conformément à SAE J1995 (la Révision 2002-5). Le et l'exécution de classement a été obtenue et a été corrigée conformément à SAE J1940 (le Petit Pouvoir de Moteur & le Moment de torsion Evaluant la Procédure), d'ingénieurs Automotors) le code J1940 (le Petit Pouvoir de Moteur & le Moment de torsion Evaluant la Procédure), et l'exécution de classement a été obtenu et a été corrigée conformément à SAE J1995 (la Révision 2002-5).

LINFORMATIION DE CLASSEMENT DE POUVOIR DE MOTEUR


données en pouces E.-U. -- 1 pouce = 25,4 mm.

REMARQUE: Toutes les dimensions de composant sont

| NO. | NO. | DE PIECE | DE DESCRIPTION |
|-----|------------|--|-----------------------------|
| 1 | ----- | Moteur B&S Model No. 31P677 | |
| 2 | 137352 | Silencieux | Moteur B&S Model No. 31P677 |
| 9 | 194319 | Guide-courroie du moteur | |
| 12 | 401985 | Poulie du moteur | |
| 15 | 407545 | Réservoir d'essence 1.50 | |
| 18 | 425162 | Ensemble du chapeau | |
| 20 | 176636X421 | Commande des gaz | |
| 21 | 416358 | VIS #10 X 0.750 BOSS FII | |
| 28 | 401137 | Conduite d'essence | |
| 29 | 137180 | Jeu du Pare-étincelles | |
| 37 | 123487X | Bride de serrage du tuyau | |
| 42 | 10040700 | Rondelle frein 7/16 | |
| 45 | 73510400 | Ecrout 1/4-20 unc | |
| 69 | 165291 | Garniture | |
| 79 | 192334 | Voyez vis à six pans croix 5/16-18x.75 | |
| 81 | 148456 | Le Pétrole d'Egout de tube Facile | |
| 82 | 181654 | Bouchon le Pétrole d'Egout | |
| 84 | 17060620 | VIS 3/8-16 x 1-1/4 | |
| 85 | 173937 | Boulin 7/16-20 x 4 x Gr. 5-1.5 | |
| 90 | 17000616 | VIS 3/8-16 x 1.0 | |
| 96 | 19091416 | Rondelle 9/32 x 7/8 x 16 ja. | |
| 97 | 17670412 | VIS 1/4 - 20 x 3/4 | |

engine-bs-1cy-ltex_4


EQUIPEMENT FACULTATIF
PARA-ETINCELLES

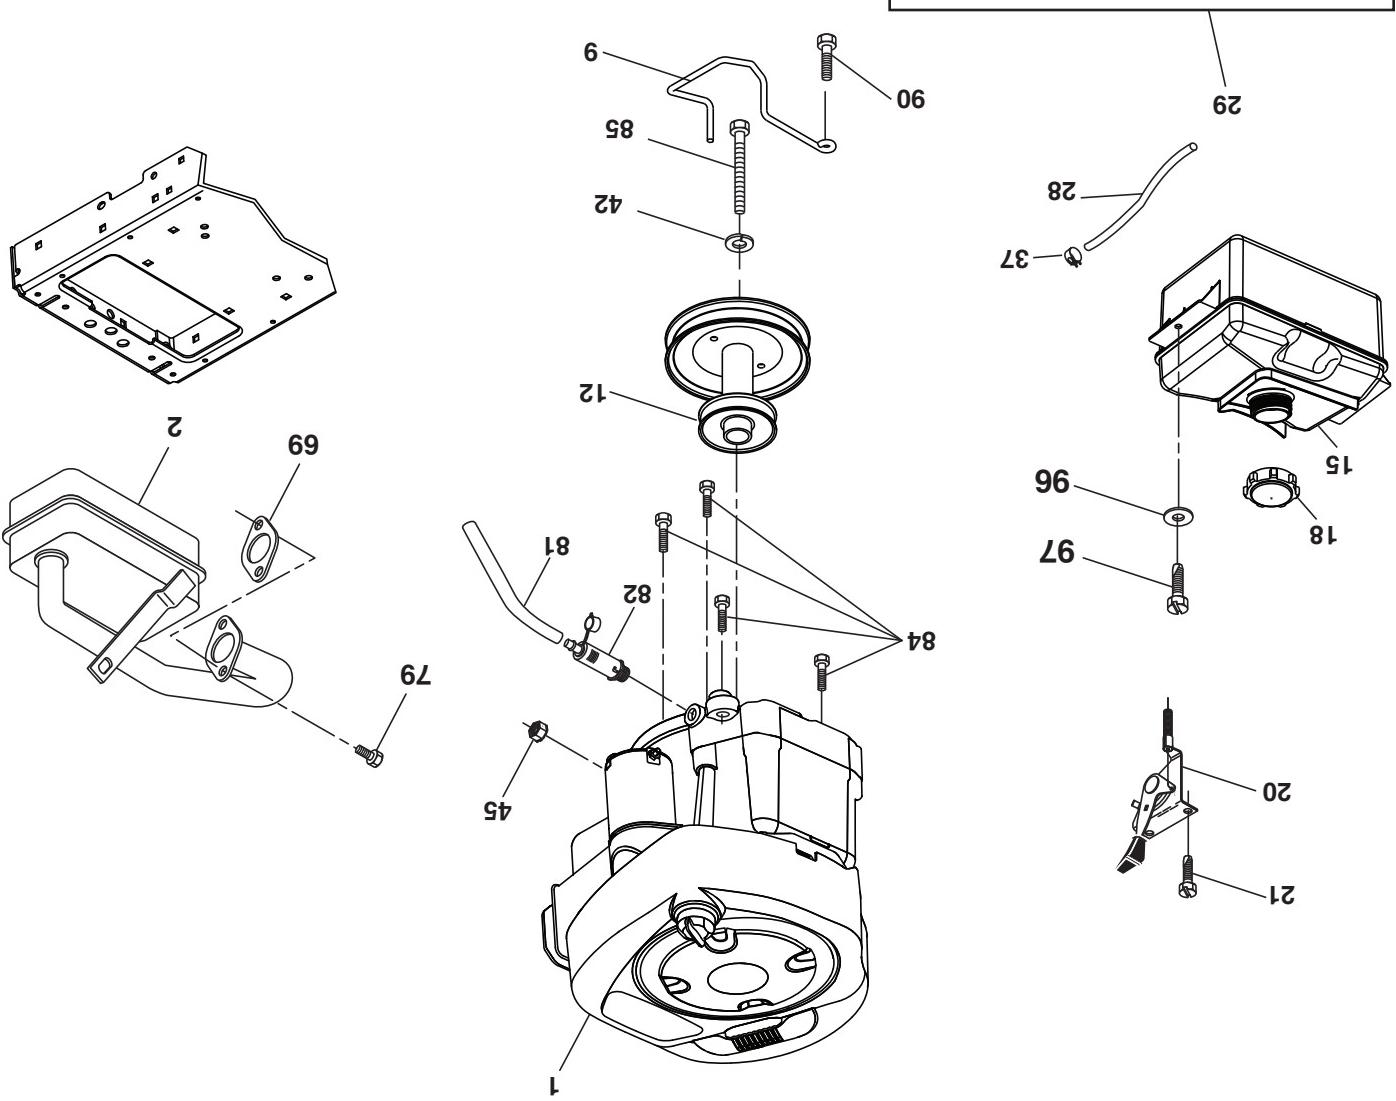

| NO. | NO. | DE PIECE | DESCRIPTON | NO. DE PIECE | DESCRIPTON | NO. | NO. | DE PIECE | DESCRIPTON |
|-----|------------|----------------------------------|--|--------------|---|----------------------|------------|------------------------------------|----------------------|
| 1 | ----- | Transaxle, Hydro Gear T2-AABC- | 1X1A-1GX1 (Pièces internes non disponibles) | 160 | 169484 | Pinche d'arretoir | 161 | 105709X | Ressort du Embrayage |
| 2 | 123583X | Carre clé | Rondelle 13/32 X 13/16 X 16 ja. | 166 | 197290 | Frein en ecrion .625 | 165 | 196212 | Bague |
| 15 | 19131316 | Rondelle 13/32 X 13/16 X 16 ja. | 167 | 405257 | Lodouet du frein de stationnement | 174 | 197289 | Frein en ecrion | |
| 17 | 197296 | Ressort du Frein | 170 | 413430 | Guidon de l'écartement centrale | 175 | 408539 | Ensemble de l'arbre | |
| 22 | 409154X421 | Changement de tige | 176 | 196214 | Bras d'embryage | 178 | 197456 | Bondir le Changement | |
| 33 | 12000001 | Tige du Frein | 183 | 156972 | Entretorse | 184 | 198403X505 | Guidon du frein de stationnement | |
| 42 | 121749X | Rondelle 25/32 X 1-1/4 X 16 ja. | 185 | 72110622 | Boulon | 186 | 194321 | Entretorse | |
| 49 | 72110614 | Couverture du Palyer la Pédale | 187 | 19133210 | Rondelle | 188 | 194323 | Raccord d'embryage | |
| 51 | 73900600 | Pouille du galat-tendeur | 189 | 194317 | Levier coude | 190 | 194318 | Guide du Levier coude | |
| 52 | 194326 | Pouille de tension 910" Décalant | 191 | 194323 | Raccord d'embryage | 205 | 121748X | Rondelle 25/32 X 1-5/8 X 16 ja. | |
| 56 | 125907X | Corroie trapézoïdale | 192 | 194322 | Levier coude | 221 | 403187 | Ressort de retenuue | |
| 64 | 196200 | Ensemble de l'arbre | 193 | 194317 | Guide du Levier coude | 231 | 407287 | Pouille de tension 1,688" Décalant | |
| 70 | 193220X428 | Panneau | 194 | 194318 | Rondelle 25/32 X 1-5/8 X 16 ja. | 232 | 74780716 | Boulon 7/16-14 X 1 Gr. 5 | |
| 73 | 74490544 | Boulon 5/16-18 Gr. 5 | 195 | 121748X | Rondelle 25/32 X 1-5/8 X 16 ja. | 233 | 405296 | Rondelle | |
| 74 | 142432 | VIS 1/4 X 1/2 | 196 | 194318 | Pouille de tension 1,688" Décalant | 234 | 408538 | Relier le Changement | |
| 80 | 408393 | Attaché de torsion | 197 | 408538 | données en pouces E.-U. -- 1 pouce = 25,4 mm. | 279 | 408538 | Goupille fendue 1/8 x 3/4 | |
| 116 | 73900500 | Écrou frein 5/16-18 unc | 198 | 408418 | REMARQUE: Toutes les dimensions de composant sont | 199 | 408418 | Ressort de tige | |
| 121 | 175611 | Support du attache de torsion | 200 | 408418 | REMARQUE: Toutes les dimensions de composant sont | 201 | 4497H | Ressort de retenue 1" | |
| 122 | 72010520 | Boulon 5/16-18 X 2.50 | 202 | 4497H | Ressort de retenue 1" | 203 | 17000512 | VIS 5/16-18 X 3/4 | |
| 125 | 17000512 | Support du attache de torsion | 204 | 76020412 | Goupille fendue 1/8 x 3/4 | 205 | 76020412 | Goupille fendue 1/8 x 3/4 | |

ENTRAINMENT

TRACTEUR - NUMERO DE MODELLE PB195H42LT (96042003604), NO. DE PRODUIT 960 42 00-36

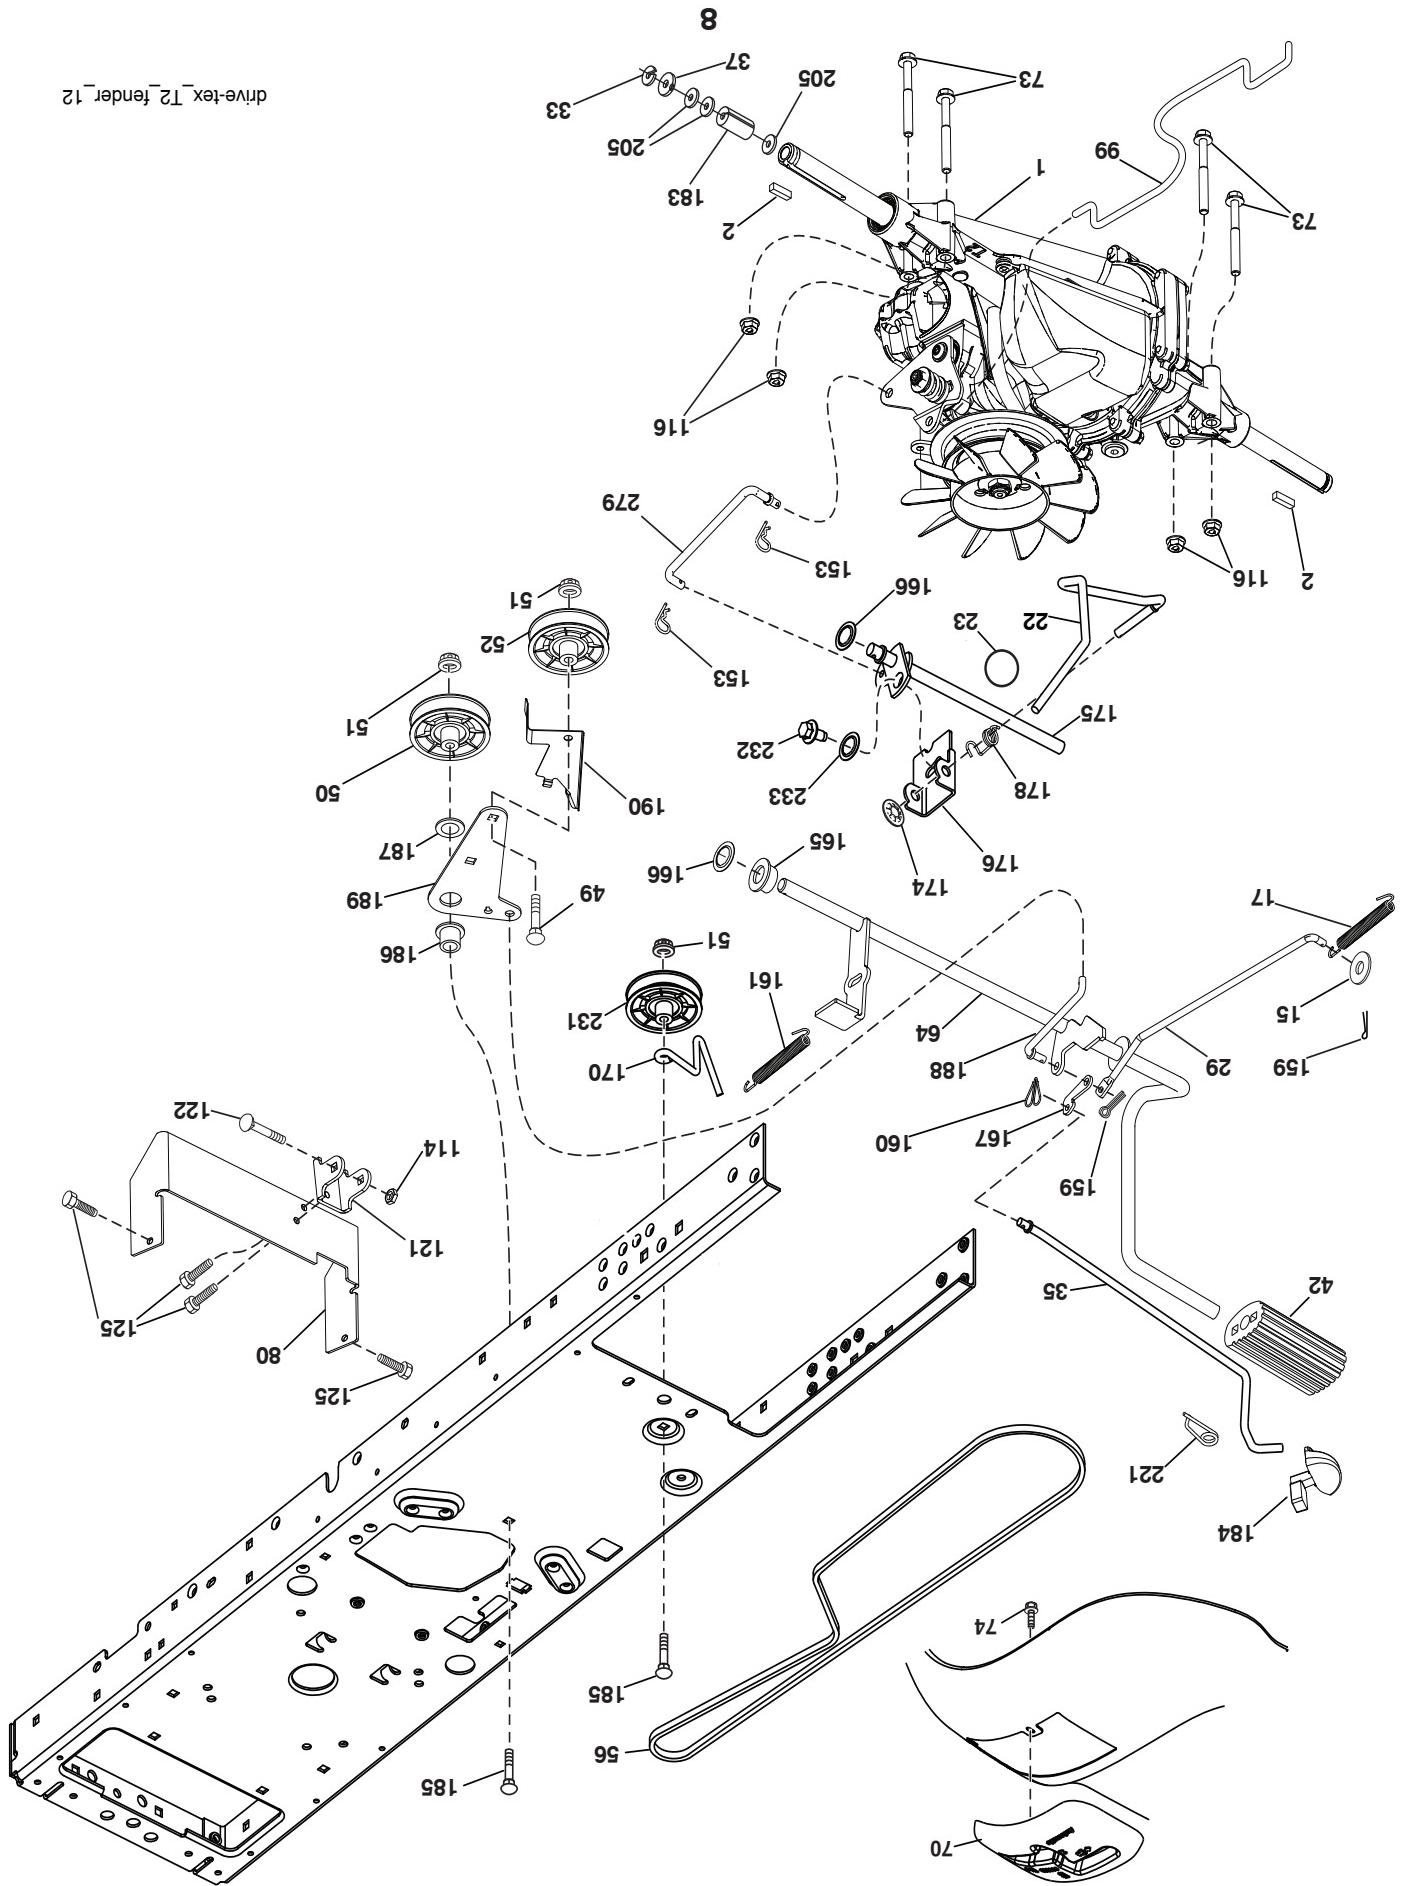


CHASSIS/ENCHEINTES

TRACTEUR - - NUMERO DE MODÈLE PB195H42LT (96042003604), NO. DE PRODUIT 960 42 00-36

| NO. | DE | PIÈCE | DESCRIPTION |
|-----|------------|-----------------------------------|-------------|
| 2 | 412280 | Barre d'attelage supérieure | |
| 5 | 197783X428 | Barre d'attelage inférieure | |
| 14 | 183393X428 | Capot | |
| 15 | 183834X599 | Grille de lentille C.G. | |
| 18 | 183395X428 | Grille | |
| 25 | 183835X599 | Grille de lentille C.D. | |
| 36 | 17060512 | Vis 5/16-18 x 3/4 | |
| 37 | 414872X428 | Aliè | |
| 58 | 412282 | Barre d'attelage inférieure | |
| 68 | 17490508 | Vis 5/16-18 x 1/2 | |
| 130 | 416358 | Vis #10 x 0.750 ROS FII | |
| 137 | 184921 | Capot du Pare-chocks | |
| 138 | 193224X428 | Entourer le support | |
| 150 | 184322 | Le Capuchon de Chaluer de conduit | |
| 151 | 407807 | Support le Pivot | |
| 152 | 194329 | Protéger le Browning/Débris | |
| 159 | 17000612 | Vis 3/8-16 x 3/4 | |
| 162 | 142432 | Vis haut-bas 1/4 x 1/2 | |
| 175 | 193243 | Traverse moyenne | |
| 176 | 400776 | Vis 10-24 x 5/8 | |
| 177 | 195228 | Douille | |
| 180 | 194260 | Chassis | |
| 181 | 193102X428 | Douille | |
| 182 | 193057 | Tableau de bord inférieur | |
| 183 | 74780520 | Boulon 5/16-18 x 1-1/4 | |
| 186 | 183829X428 | Insert du Grille | |
| 189 | 17000512 | Vis 5/16-18 x 3/4 | |
| 194 | 73900500 | Ecrou frein 5/16-18 | |
| 196 | 414581 | Ensemble du Panneau | |
| 207 | 183833 | Grille biseau C.D. | |
| 208 | 183832 | Grille biseau C.G. | |
| 217 | 409167 | Tige | |
| 228 | 195161 | Attache | |
| 235 | 406129 | Entretise de l'aliè | |
| 236 | 73930500 | Ecrou frein central 5/16-18 | |
| 287 | 17600406 | Vis 1/4-20 x 3/8 | |

REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. -- 1 pouce = 25,4 mm.

Chassis-tex_elite-sv-pro_11_r2

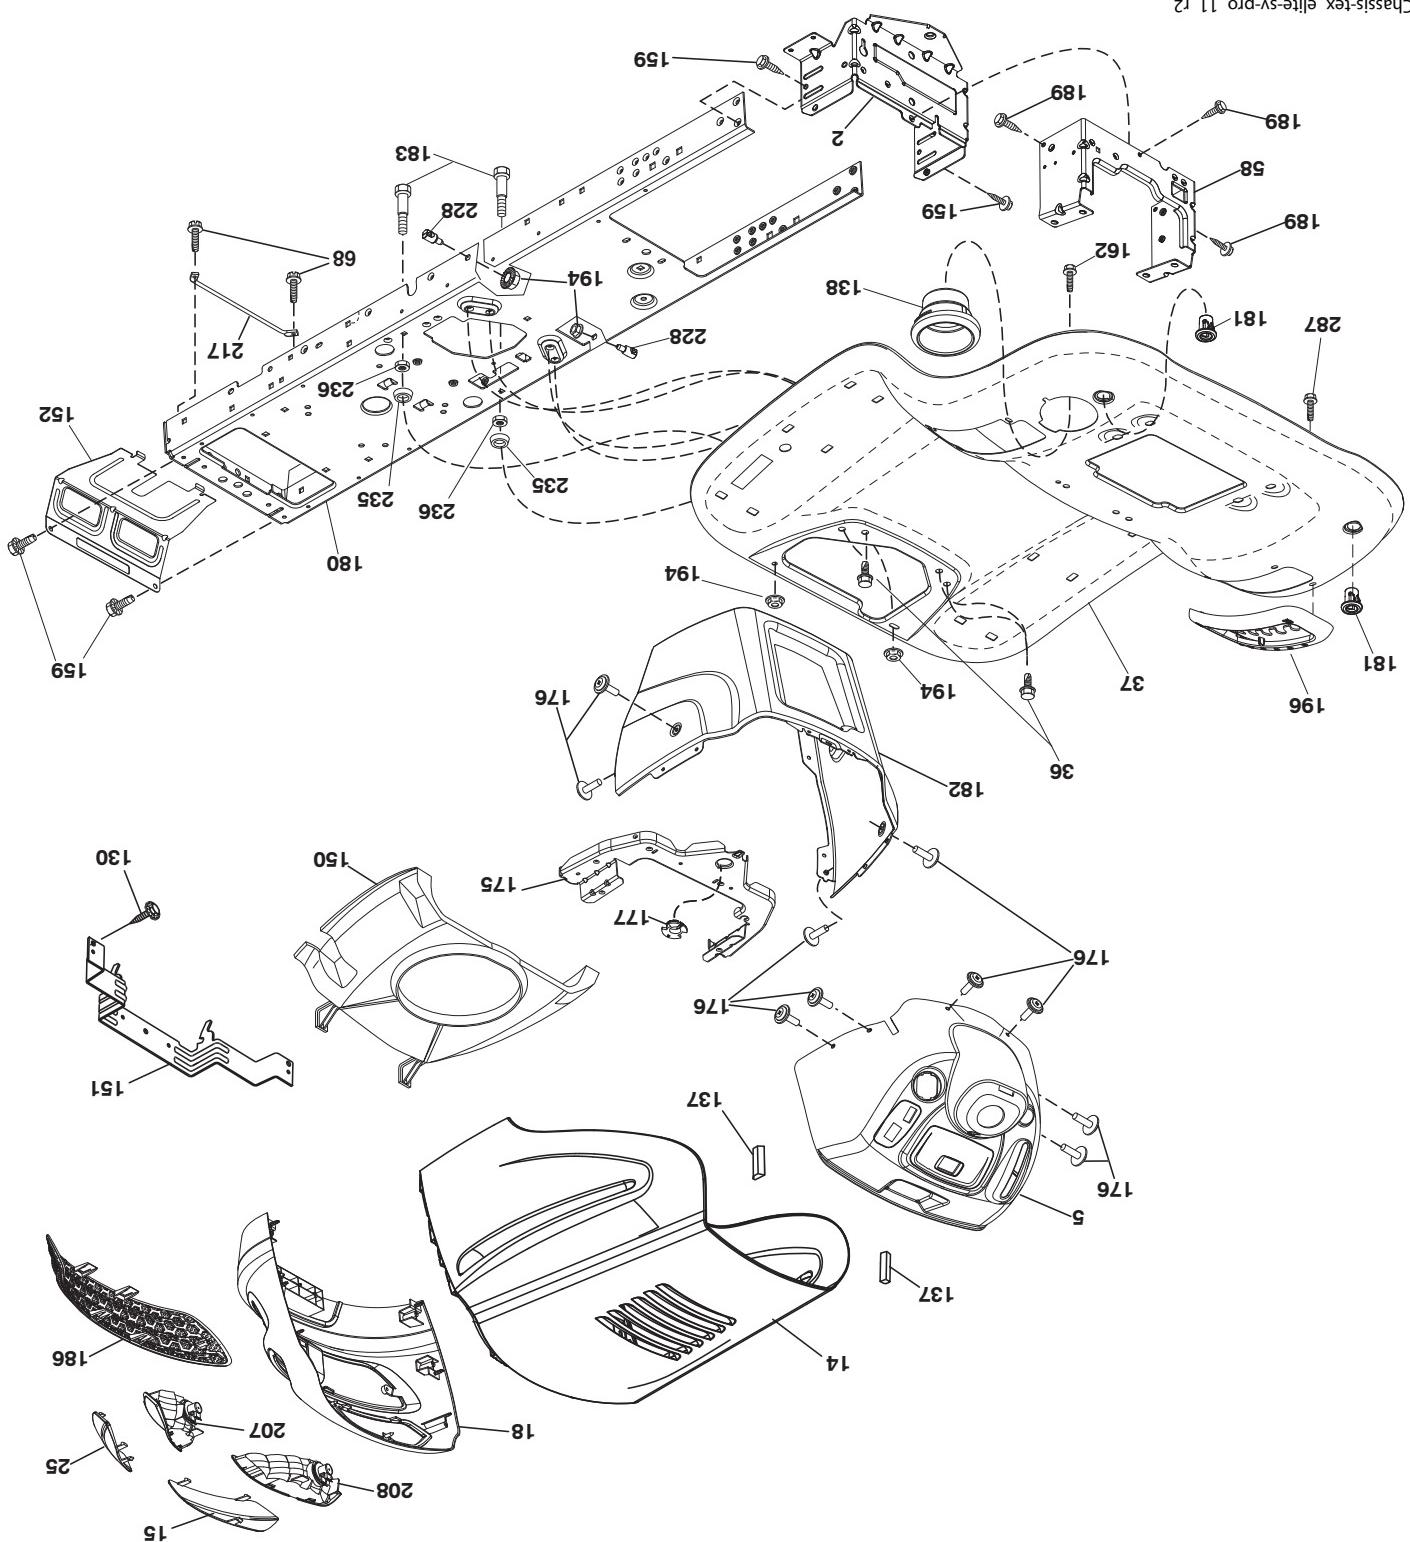


ÉLECTRIQUE

TRACTEUR - - NUMÉRO DE MODÈLE PB195H42LT (96042003604), NO. DE PRODUIT 960 42 00-36

| NO. | DE PIÈCE | DESCRIPTION | DE PIÈCE | DE PIÈCE |
|-----|-------------|--|-------------|-------------|
| 1 | 163465 | Batterie | 2 | 74760412 |
| 8 | 193228 | Boulon 1/4-20 UNC x 3/4 Bac de batterie | 2 | 74760412 |
| 16 | 176138 | Interrupteur de verrouillage pressé Harmais | 8 | 193228 |
| 21 | 183759 | Interrupteur de verrouillage pressé Harmais | 21 | 183759 |
| 22 | 4152J | Ampoule N°1156 | 22 | 4152J |
| 25 | 412894 | Câble de batterie | 25 | 412894 |
| 26 | 175158 | Fusible | 26 | 175158 |
| 27 | 73510400 | Ecrou 1/4-20 UNC | 27 | 73510400 |
| 28 | 198885 | Câble de masse de 6 ja. de 18" pile postérieure - noir | 28 | 198885 |
| 29 | 401545 | Interrupteur de lumière | 29 | 401545 |
| 30 | 193305 | Contacteur d'allumage | 30 | 193305 |
| 33 | 411935 | Câle/Chaine | 33 | 411935 |
| 34 | 110712X | Interrupteur de lumière | 34 | 110712X |
| 40 | 401098 | Harmais des câbles d'allumage | 40 | 401098 |
| 41 | 17720408 | VIS 1/4-20 X 1/2 | 41 | 17720408 |
| 42 | 131563 | Couverture de borne | 42 | 131563 |
| 43 | 192507 | Solenoïde | 43 | 192507 |
| 55 | 17060512 | VIS 5/16-18 X 3/4 | 55 | 17060512 |
| 71 | 400449 | Exploiter le Chassis d'Allumage | 71 | 400449 |
| 79 | 175242 | Prise de courant du phare | 79 | 175242 |
| 87 | 197802 | Interruuteur de verrouillage du câble d'embranchage | 87 | 197802 |
| 90 | 400725 | Couverture | 90 | 400725 |
| 92 | 196615 | Harmais | 92 | 196615 |
| 93 | 192540 | VIS 10-14 X 2.0 | 93 | 192540 |
| 94 | 191834 | Modual inverse ROS | 94 | 191834 |

REMARQUE: Toutes les dimensions de composant sont don-
nées en pouces E.-U. --1 pouce = 25,4 mm

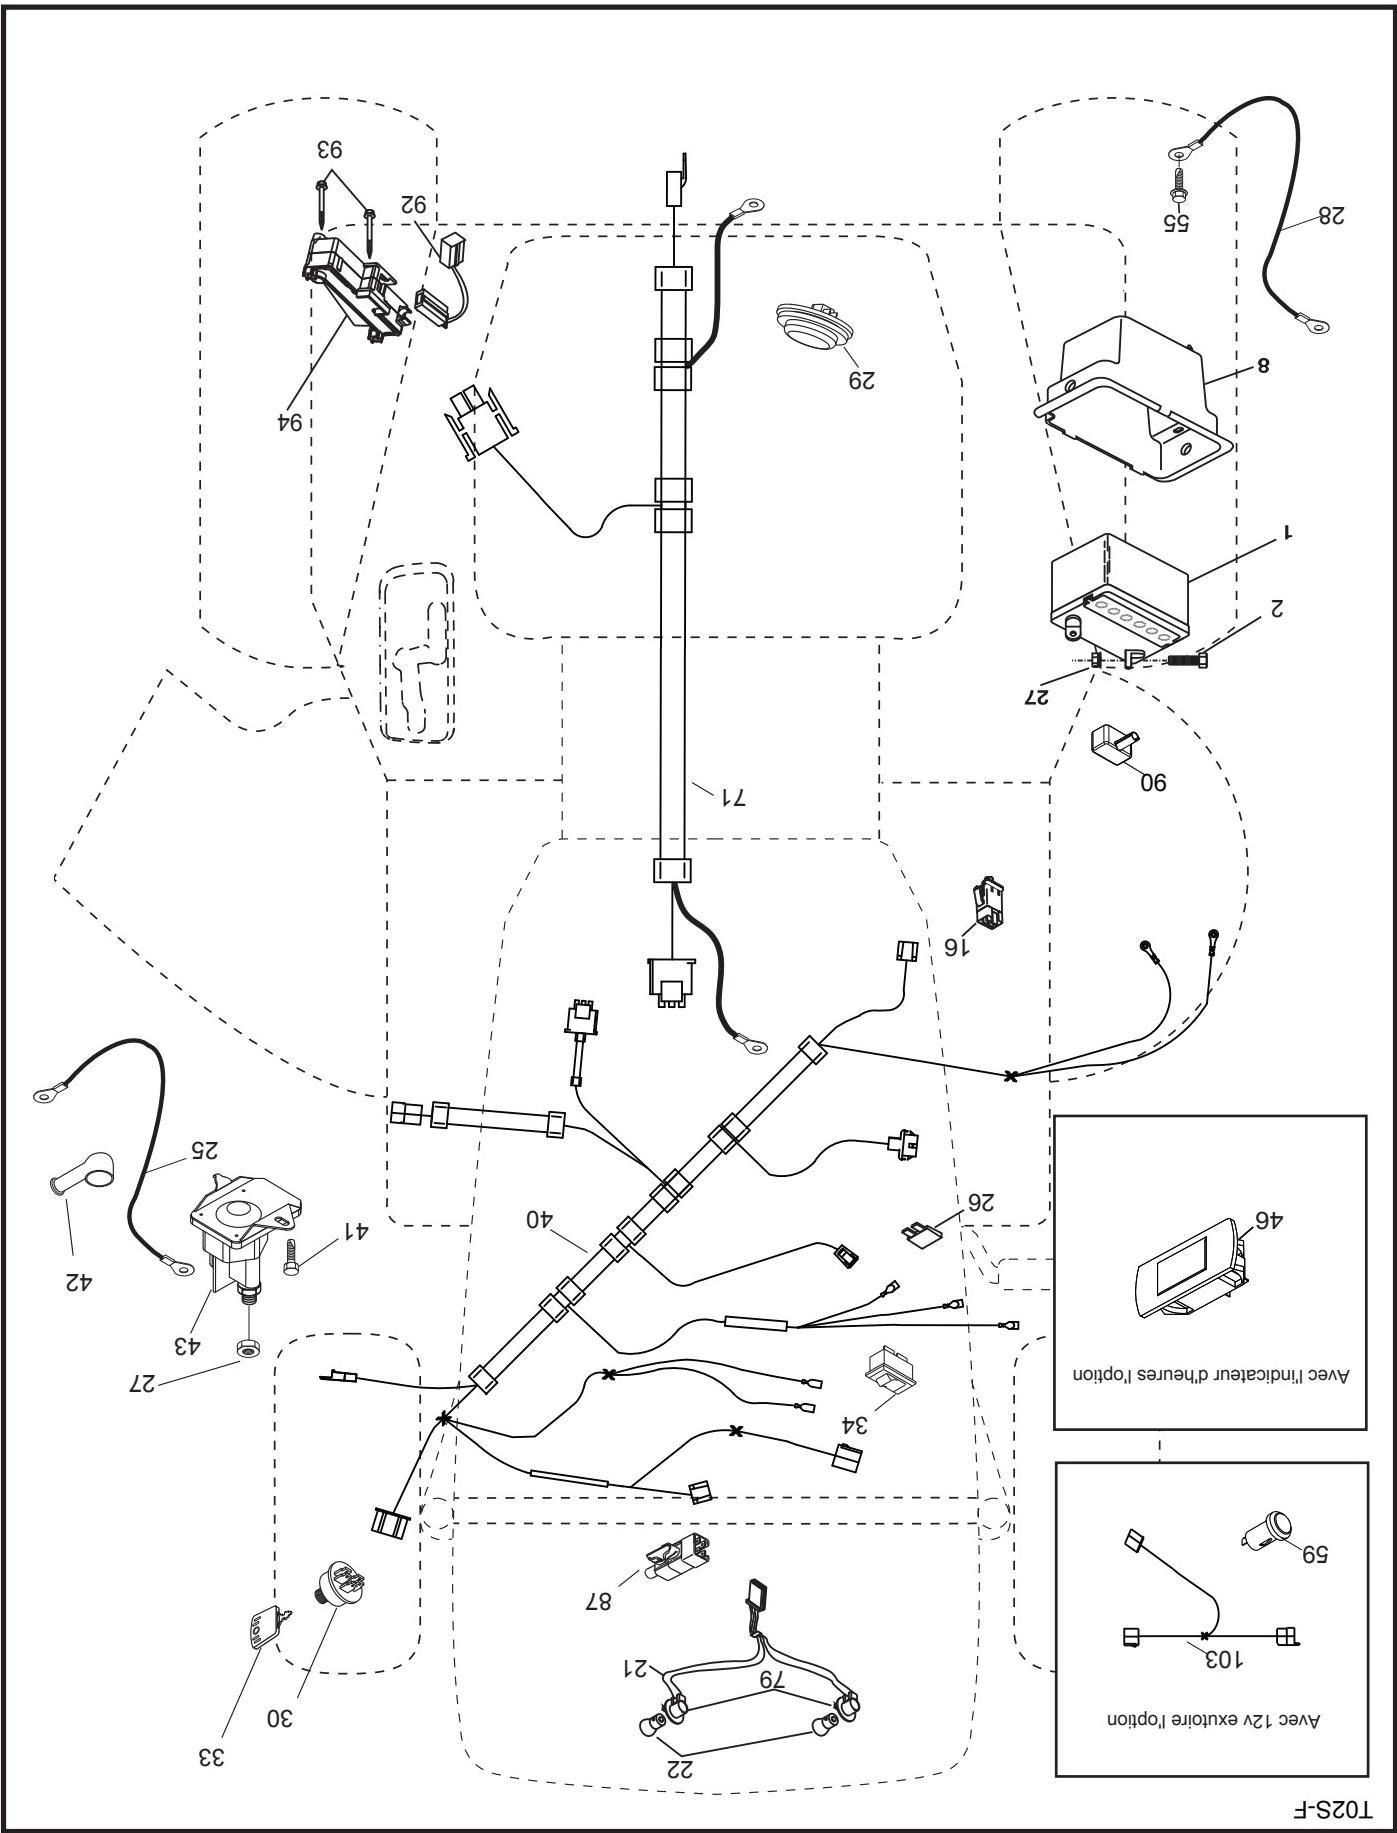


SCHEMA


TRACTEUR - NUMERO DE MODEL PB195H42LT (96042003604), NO. DE PRODUIT 960 42 00-36

REMARQUE RACTEUR EST ÉQUIPÉ

VOTRE TRACTEUR EST ÉQUIPÉ D'UN SYSTÈME D'ALTÉRNUTEUR SPÉCIAUX AU LIÉU D'ÊTRE BRANCHÉS SUR LA BATTERIE, LES PHARES DISPOSENT DE L'EURE PROPRE SOURCE D'ÉNERGIE ELECTRIQUE. DONC LA BRILLANCE DES PHARES CHANGERA EN FONCTION DE LA VITESSE DU MOTEUR. AU RALENTI, LA BRILLANCE DES PHARES AUGMENTERA. QUAND LE MOTEUR ARRÊTERA, LES PHARES SON MAXIMUM.

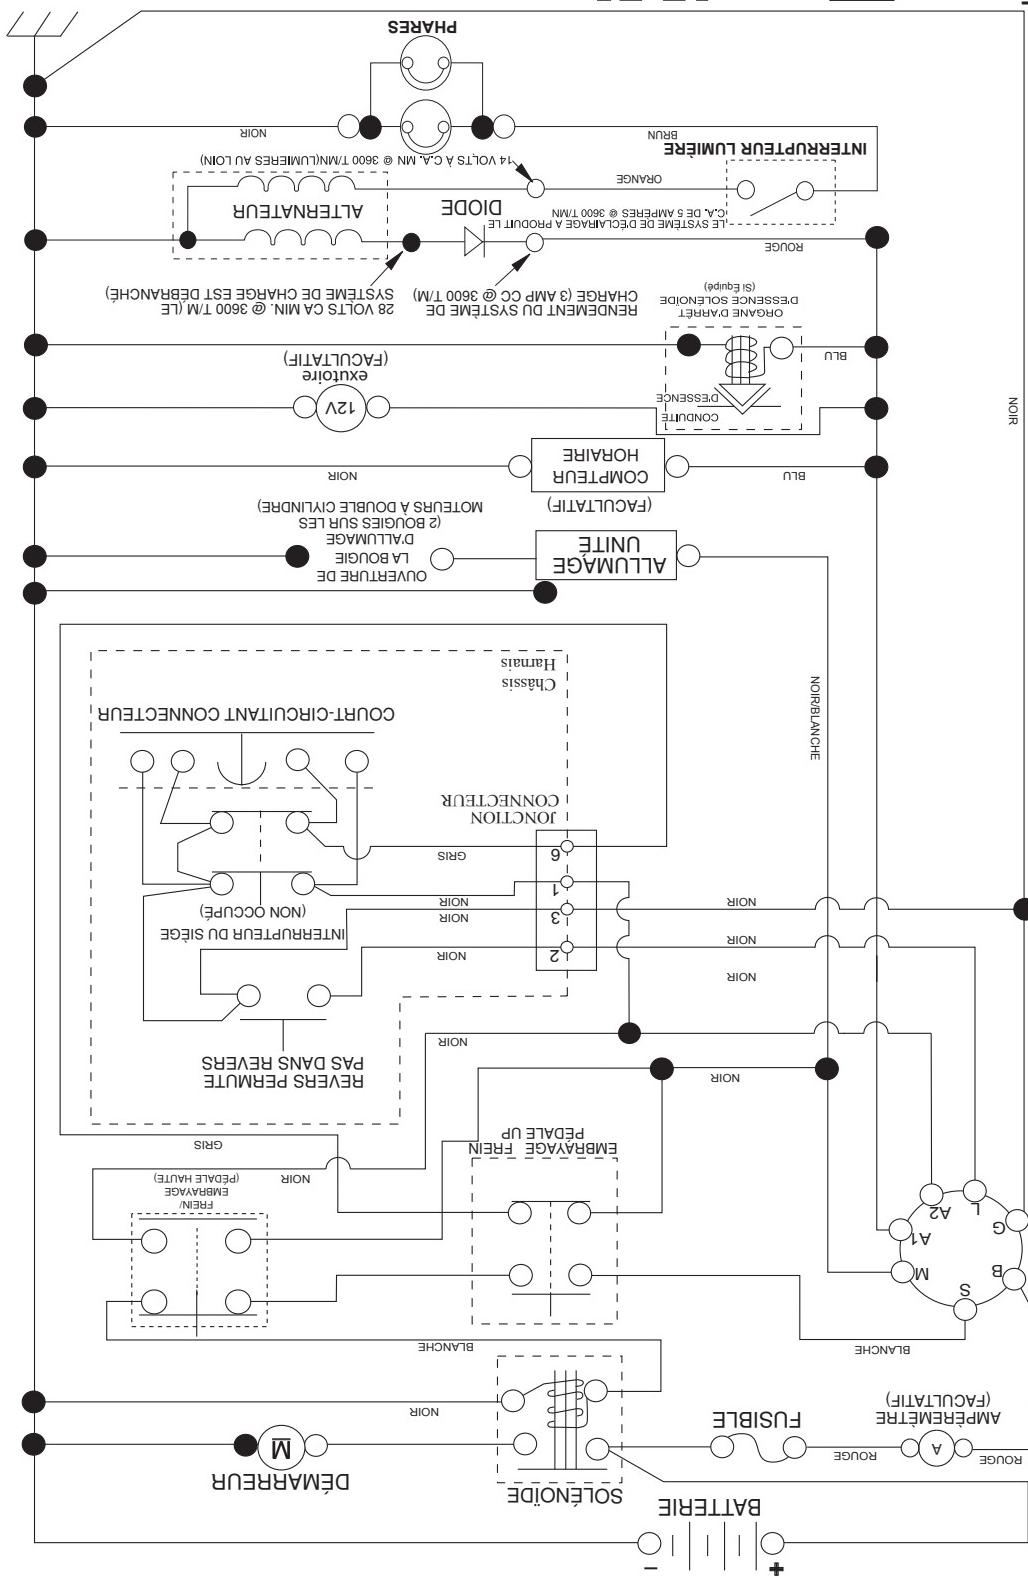

| | | | | | | | | | | | | | |
|----------|-----------------|-------|------------|-------|----------|-------|-----------|--------|------|--------|--------|------------|-----------|
| POSITION | CIRCUIT "FAITS" | ARRET | M + G + AI | MACHE | ALLUMAGE | MACHE | ALLU MAGE | MARCHE | L+A2 | B + A1 | MARCHE | B + S + AI | DÉMARRAGE |
|----------|-----------------|-------|------------|-------|----------|-------|-----------|--------|------|--------|--------|------------|-----------|

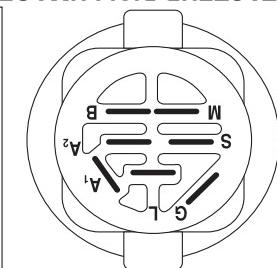

| | |
|--------------------------------|------------------|
| SCHÉMA | 3 |
| ELECTRIQUE | 4-5 |
| CHASSIS/ENCEINTES | 6-7 |
| ENTRAÎNEMENT | 8-9 |
| MOTEUR | 10-11 |
| ENSEMBLE DE LA DIRECTION | 12 |
| ENSEMBLE DU SIÈGE | 13 |
| CARTE DE TONDEUSE | 14-15 |
| LEVAGE DE LA TONDEUSE | 16 |
| DECALCOMANIES | 17 |
| GARANTIE | VERSO DE LA PAGE |

TABLE DE MATIÈRES

- Description de la Pièce
 - Numéro de la Pièce
 - NUMÉRO DU MODÈLE - "PB195H42LT (96042003604)"
 - Produit - "Tracteur"
- Lorsque vous commandez des pièces de rechange, donnez toujours les renseignements suivants:
- Le numéro de modèle du produit se trouvera sur l'aille, dessous le siège.
- Chaque tracteur a un numéro de modèle particulier.
- comme un guide dans le montage et/ou démontage de votre tracteur. La visserie montée est plus grande pour faciliter l'identification.
- Ce manuel a été dessiné pour fournir le client avec les moyens d'identification des pièces de détail que peuvent pas représenter exactement le modèle que vous avez acheté. N'utilisez pas ce manuel pour tracer quand il/elle a besoin de commander les pièces de rechange. Les illustrations

COMMENÇUT UTILISER CE MANUEL

Visitez notre site web: www.poulan-pro.com


PORTEZ TOUJOURS DES LUNETTES DE SÉCURITÉ LORS DE L'UTILISATION.

TRACTEUR DE PELOUSE

PB195H42LT

MODÈLE:

MANUEL DE PARTIES DE RÉPARATION

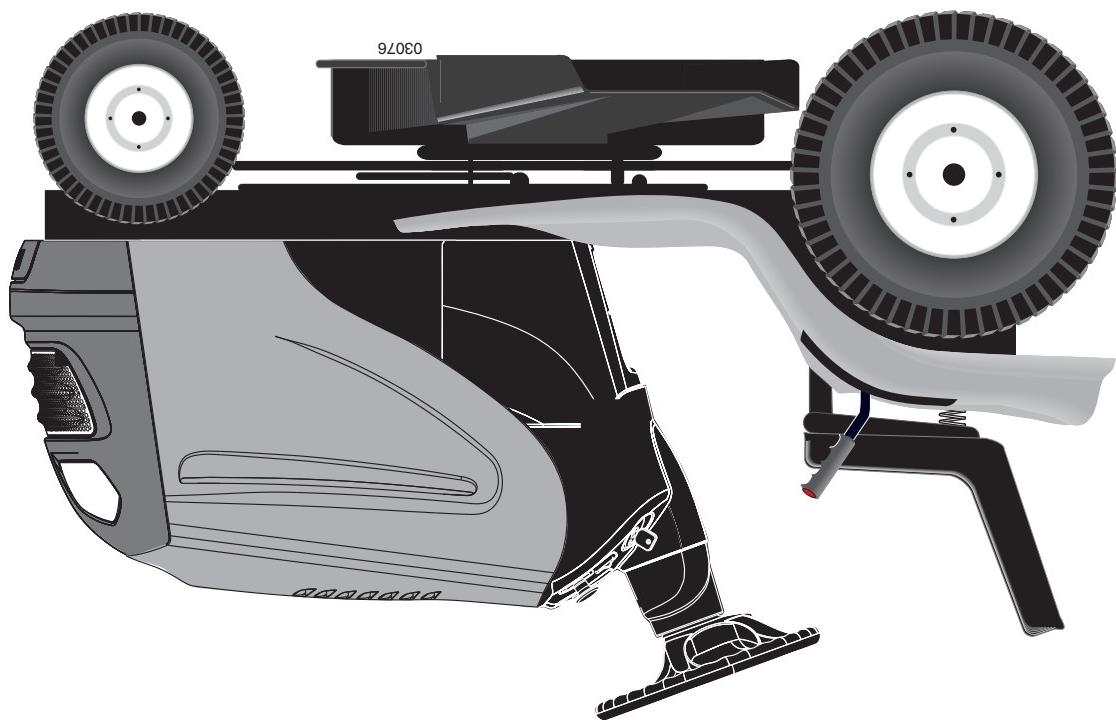**Poulan Pro**